

## 8. General Diagnostic

### A: INSPECTION

Symptom	Problem parts
Shift lock does not function.	<ul style="list-style-type: none"><li>• Stop light switch</li><li>• Shift lock solenoid</li><li>• Integrated module</li></ul>
Shift lock cannot be released.	<ul style="list-style-type: none"><li>• Stop light switch</li><li>• Shift lock solenoid</li><li>• Integrated module</li><li>• Inhibitor switch</li></ul>
Key interlock does not function.	<ul style="list-style-type: none"><li>• Key warning switch</li><li>• “P” position switch</li><li>• Key lock solenoid</li><li>• Integrated module</li></ul>
Key interlock cannot be released.	<ul style="list-style-type: none"><li>• Key warning switch</li><li>• “P” position switch</li><li>• Key lock solenoid</li><li>• Integrated module</li></ul>
Starter does not run.	<ul style="list-style-type: none"><li>• Inhibitor switch</li><li>• Select cable</li><li>• Starter circuit</li></ul>
Back-up light does not light up.	<ul style="list-style-type: none"><li>• Inhibitor switch</li><li>• Select cable</li><li>• Back-up light circuit</li></ul>

## GENERAL DIAGOSTIC

CONTROL SYSTEMS

---