

### 5. Oil Seal

#### A: INSPECTION

Inspect for oil leakage from the oil seal. Replace the oil seal if the lips is deformed, hardened, damaged, worn or defective if any.

#### B: REPLACEMENT


- 1) Clean the transmission exterior.
- 2) Drain the gear oil completely.

**NOTE:**

Tighten the drain plug after draining gear oil.


**Tightening torque:**

44 N·m (4.5 kgf·m, 32.5 ft-lb)

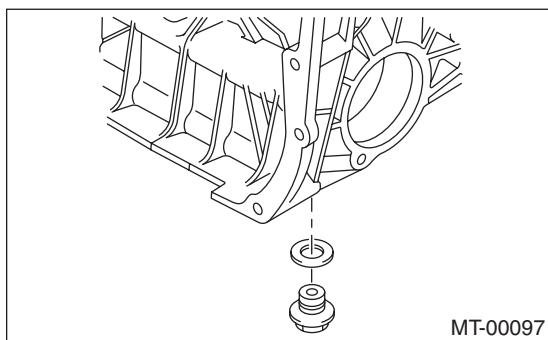


- 3) Remove the rear exhaust pipe and muffler.
- 4) Remove the heat shield cover. (If equipped)
- 5) Remove the propeller shaft. <Ref. to DS-14, REMOVAL, Propeller Shaft.>
- 6) Using ST, remove the oil seal.

ST 398527700 PULLER ASSY

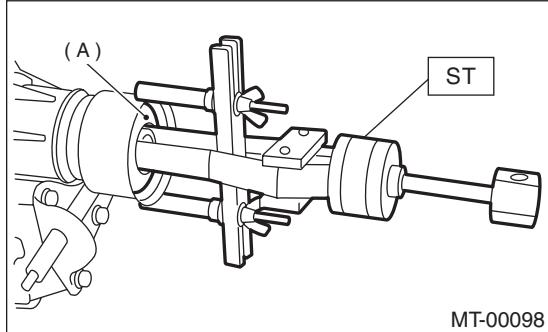

(A) Oil seal

- 7) Using ST, install the oil seal.  
ST 498057300 INSTALLER

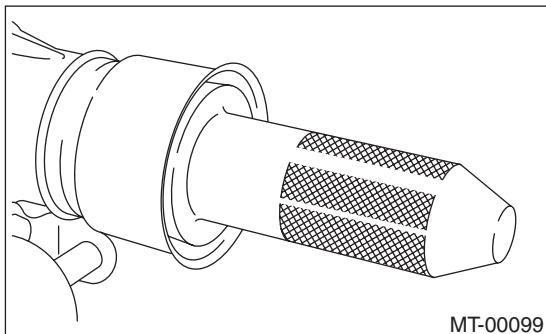

- 8) Install the propeller shaft. <Ref. to DS-15, INSTALLATION, Propeller Shaft.>
- 9) Install the heat shield cover. (If equipped)
- 10) Install the rear exhaust pipe and muffler.
- 11) Pour the gear oil and check the oil level. <Ref. to MT-26, Transmission Gear Oil.>