


### 7. Front Door Latch Assembly

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front door trim. <Ref. to EI-38, REMOVAL, Front Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-17, REMOVAL, Front Sealing Cover.>
- 4) Remove the front inner remote. <Ref. to SL-28, REMOVAL, Front Inner Remote.>
- 5) Remove three screws and a bolt.

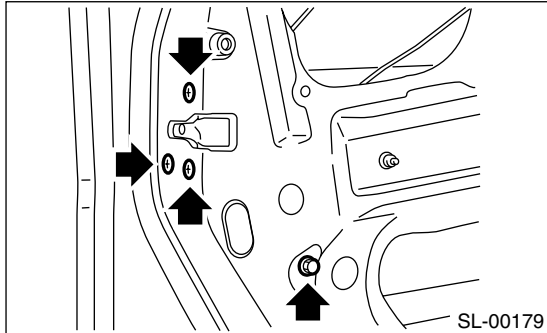

- 6) Remove the front door latch assembly, and then disconnect the connector.

#### B: INSTALLATION

Install in the reverse order of removal.

#### NOTE:

Make sure the lock works properly after installation.

#### C: INSPECTION

- 1) Make sure the rod is not deformed.
- 2) Make sure the lever and rod work smoothly.