

SEAT


SE

| | Page |
|---------------------|------|
| 1. Front Seat | 2 |
| 2. Rear Seat | 5 |

1. Front Seat

A: ADJUSTMENT

- The height of each headrest is adjustable to any of the 3 positions available.
- The angle of each backrest is adjustable to any of the 40 positions available at 2° steps.
- The front seat can be slid back and forth to one of the 16 positions available at 13.5 mm (0.53 in) steps.

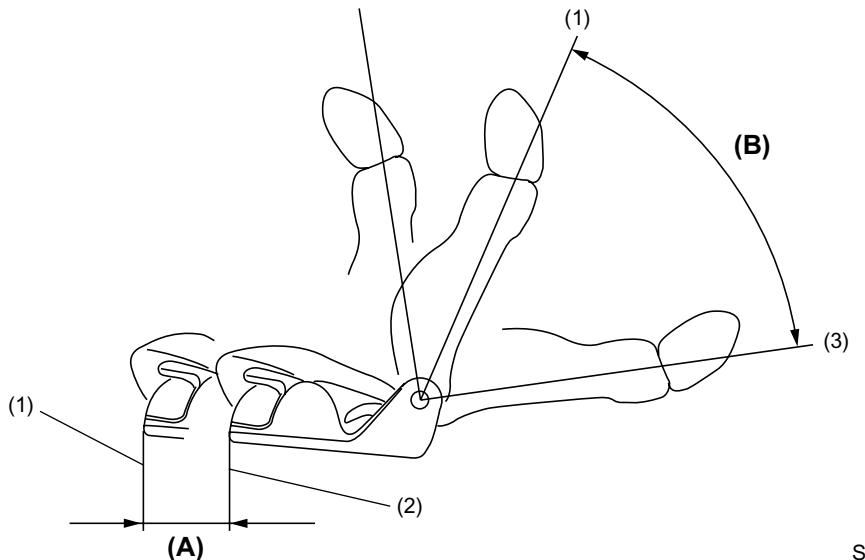

SE-00237

(1) 1st position

(2) 17th position

(3) 41st position

(A) $16 \times 13.5 \text{ mm (0.53 in)}$


(B) $40 \times 2^\circ$

B: HEIGHT ADJUSTER

The driver's seat is provided with a height adjuster. This adjuster allows adjusting the seat height within a range of 42 mm (1.65 in).

Both the seat cushion and backrest rises every time the lifter lever is pulled up; they lowers every time the lever is pushed down.

The lever is enlarged for easier operation.

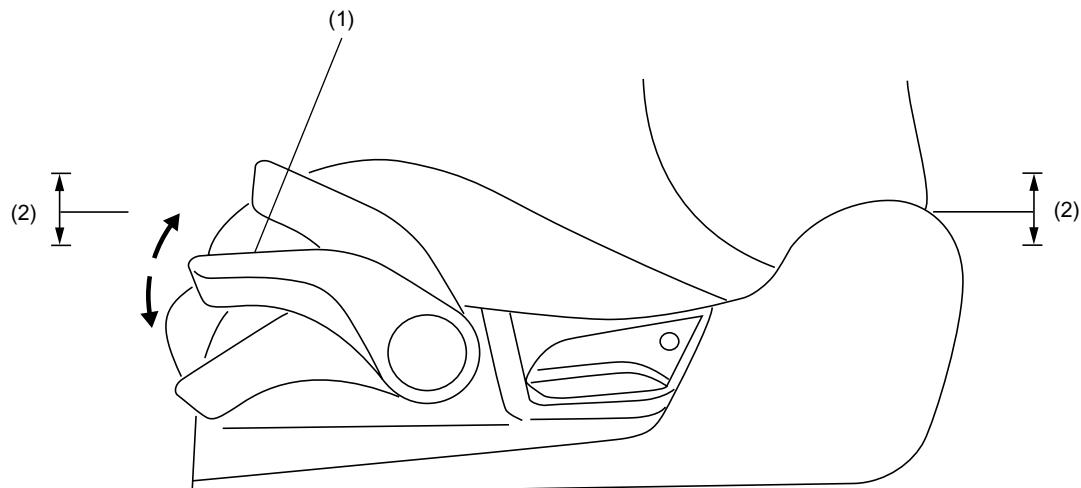

SE-00325

(1) Lifter lever


(2) 42 mm (1.65 in)

FRONT SEAT


SEAT

C: ACTIVE HEAD REST

In case of rear-end collision, the head rest moves forward to immediately support the passenger's head to reduce the possibility of injury to the neck.

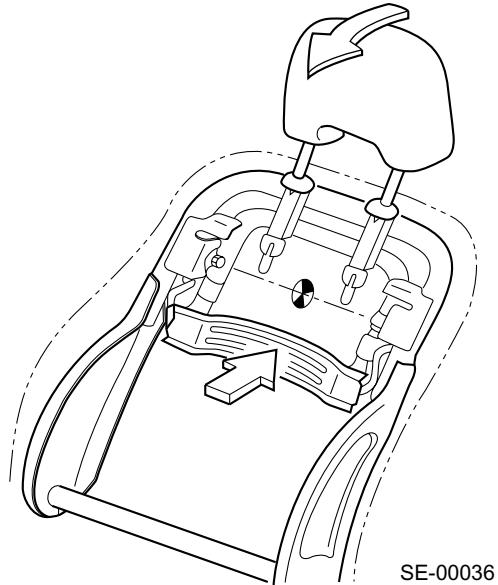

SE-00036

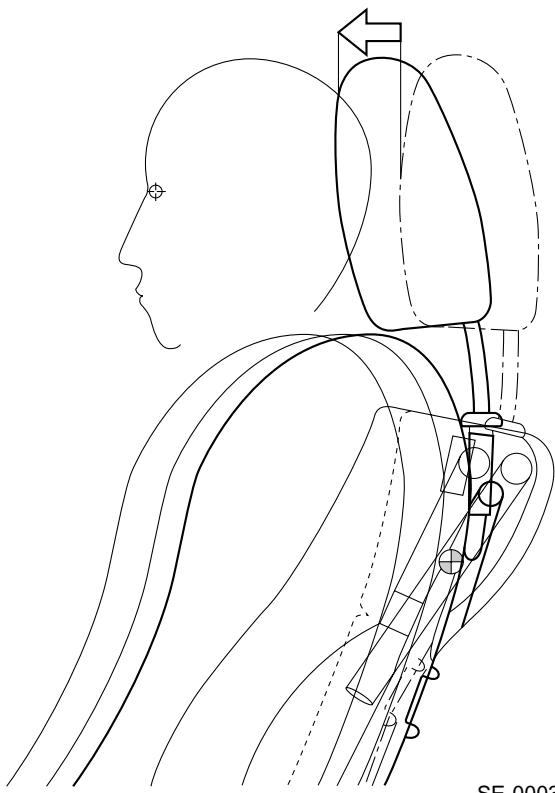



SE-00037

- 1) In case of rear-end collision, the passenger's body will move rearward by the impact.
- 2) When the body moves rearward, the thrust receiving plate inside the seat is pressed in.
- 3) When the thrust receiving plate is pressed in, the head rest moves forward due to a levering action.

2. Rear Seat

A: OPERATION

Unlock the seatback by pulling the release knob and then fold the seatback down.

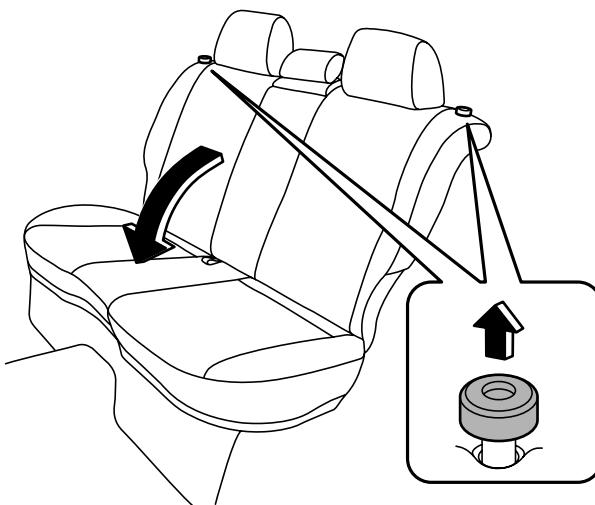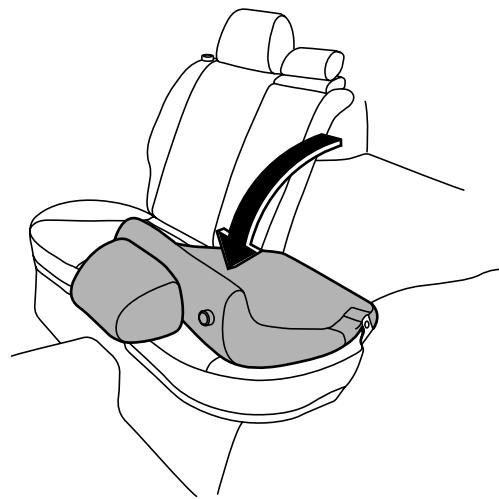

SE-00482

REAR SEAT

SEAT

MEMO