


## 11.Curtain Airbag Sensor

### A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the rear seat. <Ref. to SE-12, REMOVAL, Rear Seat.>
- 4) Remove the nuts and then remove the curtain airbag sensor.

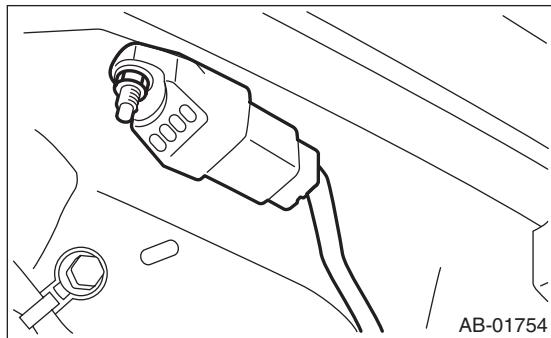

- 5) Disconnect the airbag connector.

### B: INSTALLATION

#### CAUTION:

- Do not reuse the bolt and nut.  
Always use new bolts and nuts for them.
- When installing the sensor, securely insert the arrest pin on the back side of sensor into the body side hole.

Install in the reverse order of removal.

#### *Tightening torque:*

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Curtain airbag sensor or connector is damaged.
- Curtain airbag is deployed.