


13.Roll Connector

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the driver's airbag module. <Ref. to AB-15, Driver's Airbag Module.>
- 4) Remove the steering wheel. <Ref. to PS-12, REMOVAL, Steering Wheel.>
- 5) Remove the steering column cover.
- 6) Remove the screws, and then remove the roll connector.

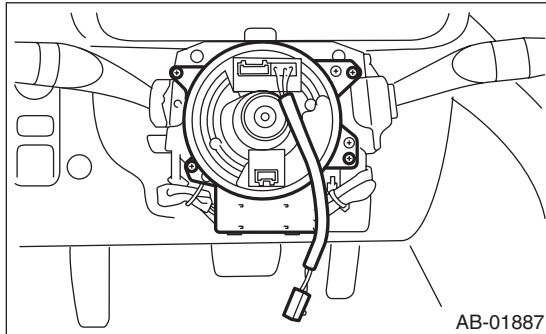

B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Before installing steering wheel, be sure to adjust the direction of roll connector with steering. <Ref. to AB-26, ADJUSTMENT, Roll Connector.>


C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Combination switch and roll connector are cracked or deformed.

D: ADJUSTMENT

- 1) Check that front wheels are positioned in straight ahead direction.
- 2) Turn the roll connector pin (A) clockwise until it stops.
- 3) Turn the roll connector pins (A) approx. 3.25 turns in the counterclockwise direction until “▲” marks are aligned.

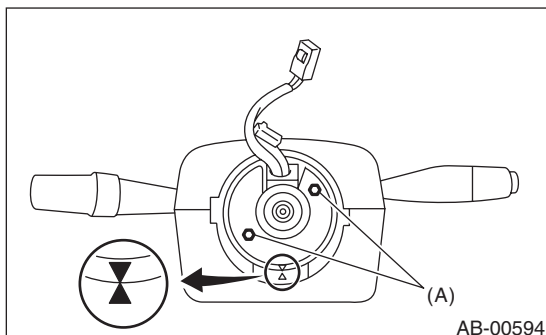

AIRBAG SYSTEM (DIAGNOSTICS)

AB(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	19
5. Airbag Connector	21
6. Airbag Control Module I/O Signal	22
7. Subaru Select Monitor	24
8. Read Diagnostic Trouble Code (DTC)	29
9. Inspection Mode	30
10. Clear Memory Mode	31
11. Airbag Warning Light Illumination Pattern	32
12. Airbag Warning Light Failure	33
13. List of Diagnostic Trouble Code (DTC)	37
14. Diagnostic Chart with Trouble Code	43