


4. Electrical Component Location

A: LOCATION

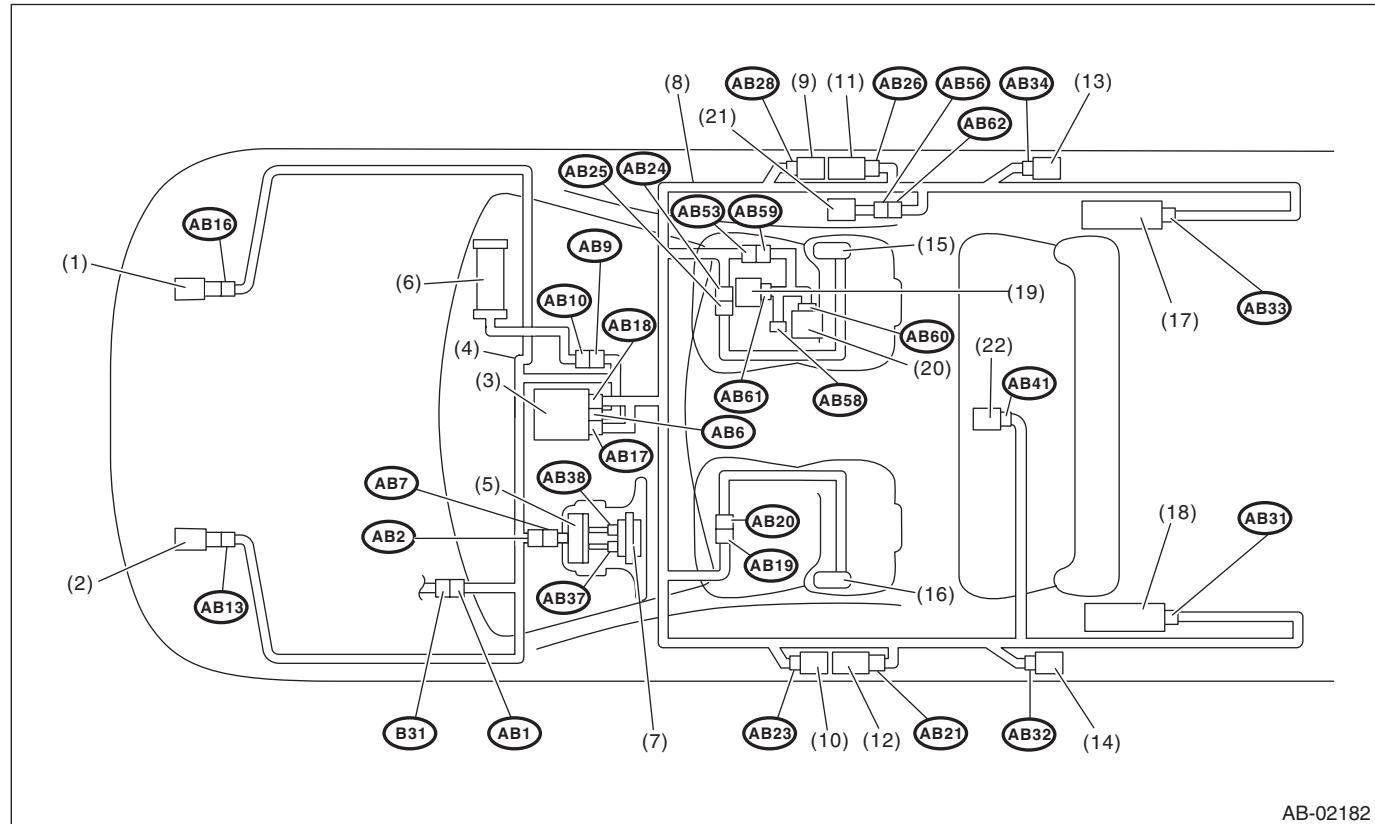

(1) Front sub sensor (RH)	(9) Side airbag sensor (RH)	(17) Curtain airbag inflator (RH)
(2) Front sub sensor (LH)	(10) Side airbag sensor (LH)	(18) Curtain airbag inflator (LH)
(3) Airbag control module	(11) Seat belt pretensioner (RH)	(19) Occupant detection control module
(4) Airbag main harness	(12) Seat belt pretensioner (LH)	(20) Buckle switch (RH)
(5) Roll connector	(13) Curtain airbag sensor (RH)	(21) Belt tension sensor
(6) Passenger's airbag inflator	(14) Curtain airbag sensor (LH)	(22) Satellite safing sensor
(7) Driver's airbag inflator	(15) Side airbag inflator (RH)	
(8) Airbag rear harness	(16) Side airbag inflator (LH)	

Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB10)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB20)
Pin	6	4	30	4	4	4	2	2	24	24	4	4
Color	Yellow											
Male/Female	Female	Female	Female	Male	Female	Male	Female	Female	Female	Female	Female	Male
Connector No.	(AB21)	(AB23)	(AB24)	(AB25)	(AB26)	(AB28)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)
Pin	2	4	4	4	2	4	2	4	2	4	2	2
Color	Black	Yellow	Yellow	Yellow	Black	Yellow	Black	Yellow	Black	Yellow	Orange	Black
Male/Female	Female	Female	Female	Male	Female							
Connector No.	(AB41)	(AB53)	(AB56)	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)				
Pin	2	6	3	3	6	2	18	3				
Color	Yellow	Gray	Brown	Gray	Gray	Yellow	Black	Brown				
Male/Female	Female	Female	Male	Female	Male	Male	Female	Female				