


3. Horn

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front bumper face. <Ref. to EI-29, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 3) Disconnect the harness connector.
- 4) Remove the horn bracket mounting bolt, and remove the horn assembly.

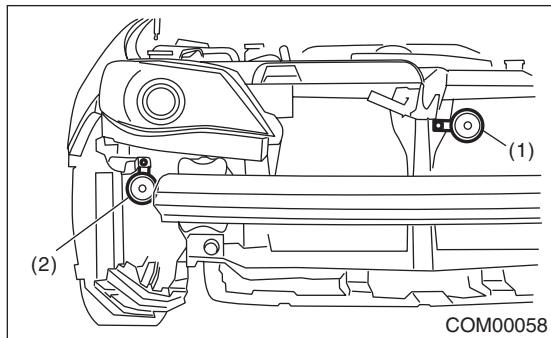

- (1) Lo side horn
(2) Hi side horn

B: INSTALLATION


Install in the reverse order of removal.

Tightening torque:

- Lo side: 18 N·m (1.8 kgf-m, 13.3 ft-lb)***
Hi side: 13 N·m (1.3 kgf-m, 9.6 ft-lb)

C: INSPECTION

With 12 V direct current supply between horn terminal and case ground, check that the horn sounds properly.

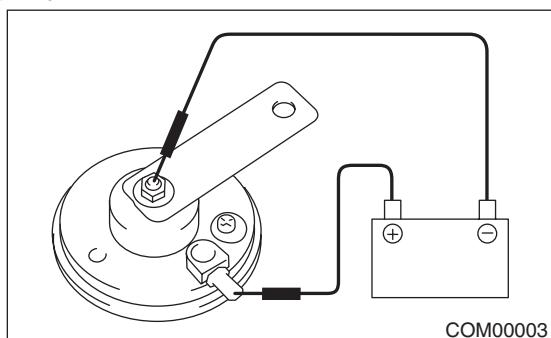

If defective, replace the horn.