

## 2. Cruise Control Module

### A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

For removal/installation procedures of the control module, refer to Engine section.

### B: REMOVAL

- 2.5 L turbo model <Ref. to FU(H4DOTC)-51, REMOVAL, Engine Control Module (ECM).>
- 2.5 L non-turbo model <Ref. to FU(H4SO)-2, SPECIFICATION, General Description.>

### C: INSTALLATION

- 2.5 L turbo model <Ref. to FU(H4DOTC)-51, INSTALLATION, Engine Control Module (ECM).>
- 2.5 L non-turbo model <Ref. to FU(H4SO)-2, SPECIFICATION, General Description.>