

9. Neutral Position Switch

A: NOTE

For neutral position switch, refer to Manual Transmission & Differential section. <Ref. to 5MT-32, Switches and Harness.>

Neutral Position Switch

CRUISE CONTROL SYSTEM

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

CC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	4
3. Electrical Component Location	5
4. Engine Control Module (ECM) I/O Signal	6
5. Subaru Select Monitor	7
6. Diagnostics with Phenomenon	9
7. List of Cancel Code	11
8. Diagnostic Procedure with Cancel Code	14