



8. Antenna

A: REMOVAL

- 1) Remove the roof trim. <Ref. to EI-64, REMOVAL, Roof Trim.>
- 2) Disconnect the harness connectors and terminals and remove the fitting nut (A).

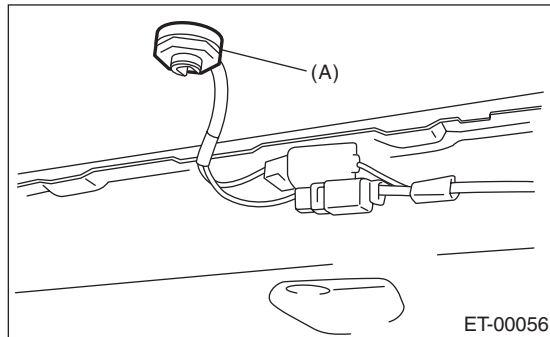

- 3) Pull off the antenna from the roof.

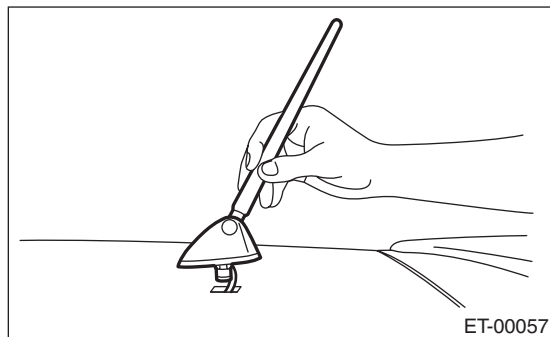

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Check for cracks or damages.
If any cracks or damages, replace the antenna.