


## 4. Front Performance Stay

### A: REMOVAL

- 1) Remove the front fender. <Ref. to EB-17, REMOVAL, Front Fender.>
- 2) Remove the bolts and harness clip, and remove the front performance stay.

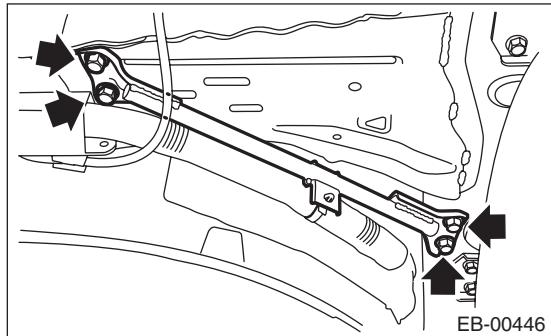

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***70 N·m (7.14 kgf·m, 51.6 ft-lb)***