
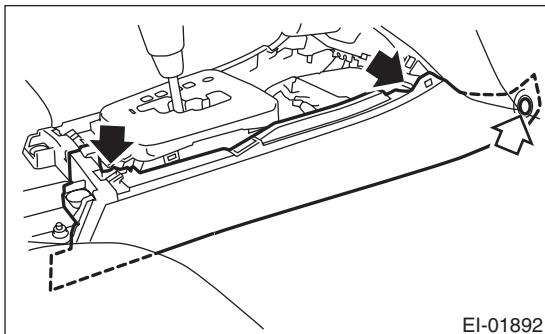


18.Center Console

A: REMOVAL

1. CENTER PANEL

- 1) Insert the plastic clip remover into the slit on the bottom of the center panel, to lift the panel.
- 2) Remove the claws and resin hook and then remove the center panel.

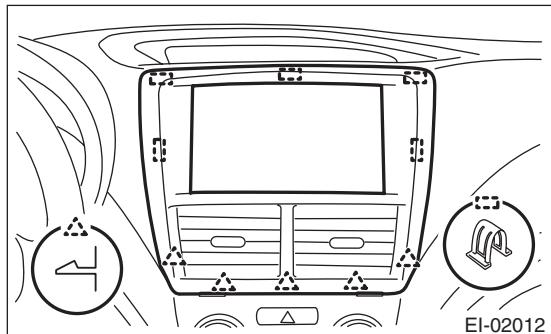

EI-01892


NOTE:

Pull towards the rear of the vehicle to remove.

3. ORNAMENT PANEL


• Driver's side

- 1) Remove the plastic hook (A), and remove the instrument panel side cover LH.

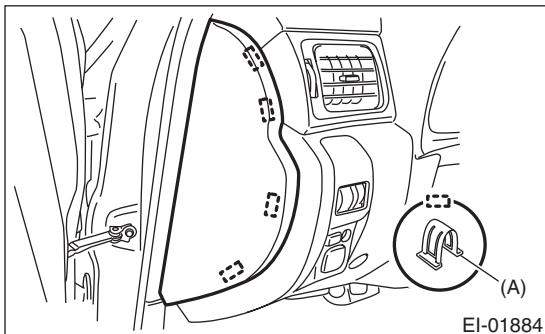

EI-01884


- 2) Remove the plastic hook (A), and detach the meter visor.

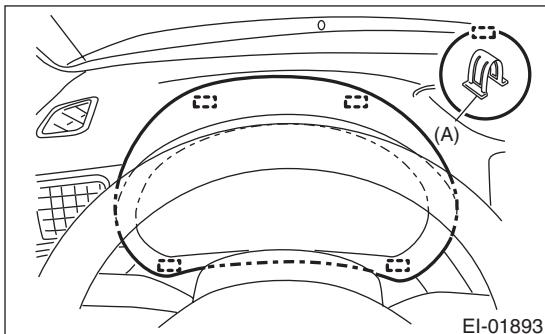

EI-01893

2. CONSOLE FRONT PANEL


- 1) Remove the console box. <Ref. to EI-48, REMOVAL, Console Box.>
- 2) Remove the shift knob. (MT model)
- 3) Detach plastic hook (A), and remove the console front panel.

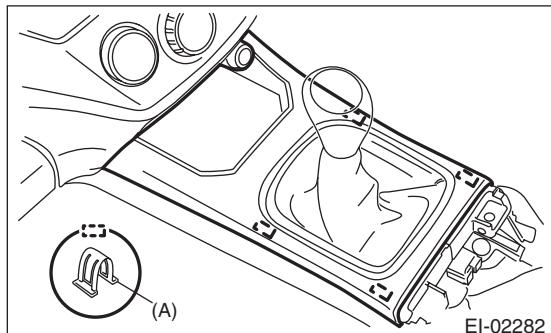

NOTE:

When removing the console front panel, pull it in the direction of the rear vehicle.

- 4) Remove the clips and screws, and remove the console side cover.

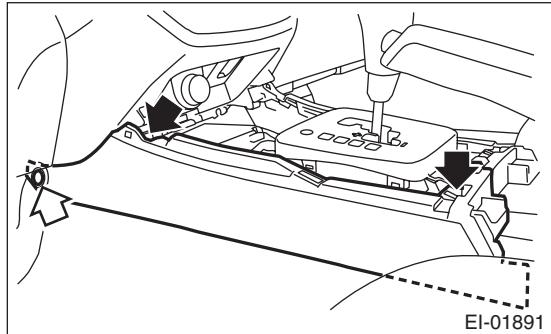


NOTE:

Remove the plastic hook on the bottom side of the meter visor by pulling it.

Center Console


EXTERIOR/INTERIOR TRIM

3) Detach the screw and the claw to take out ornament panel LH.

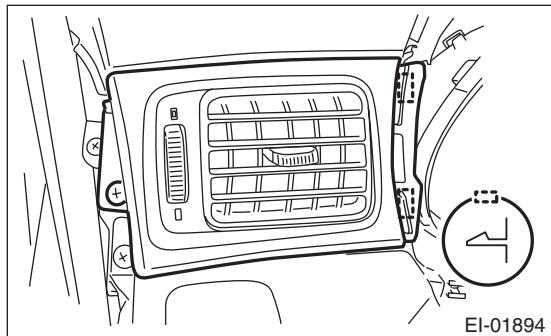

• Passenger's side


1) Remove the instrument panel lower cover. <Ref. to EI-46, REMOVAL, Instrument Panel Lower Cover.>
 2) Remove the plastic hook (A), and detach the meter visor.

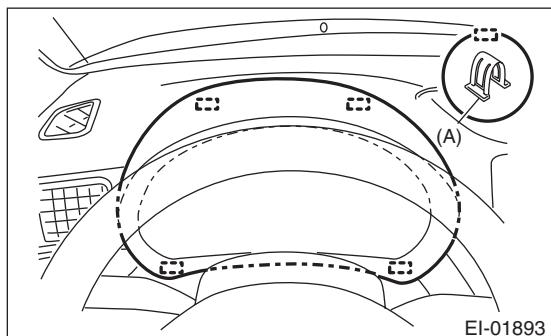


NOTE:

Remove the plastic hook on the bottom side of the meter visor by pulling it.


3) Insert the plastic clip remover into the slit on the bottom of the center panel, to lift the panel.
 4) Remove the claws and resin hook and then remove the center panel.

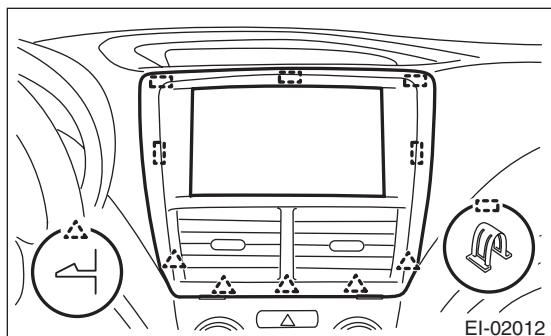


5) Detach the plastic hook (A), and remove the instrument panel side cover RH.

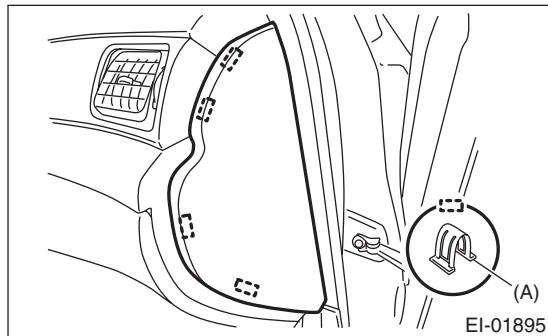

6) Remove the glove box lid. (Manual A/C model)
 <Ref. to EI-47, REMOVAL, Glove Box.>
 7) On manual A/C models, detach the control cable.

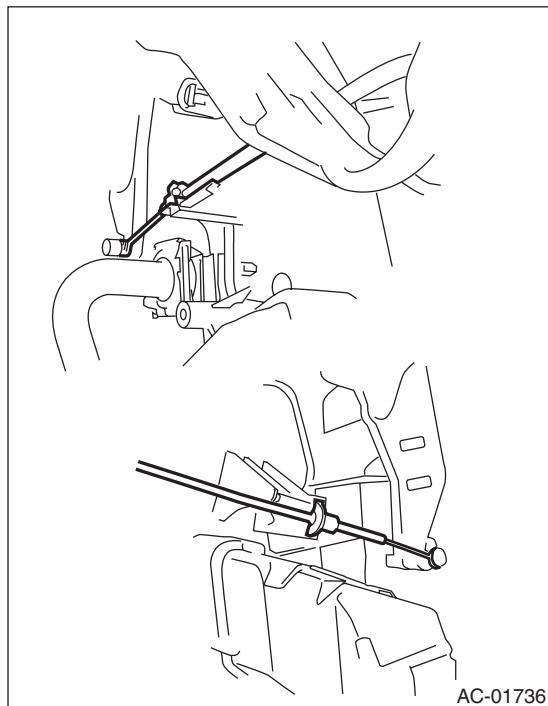

8) Detach the screws and the plastic hooks to remove ornament panel RH.

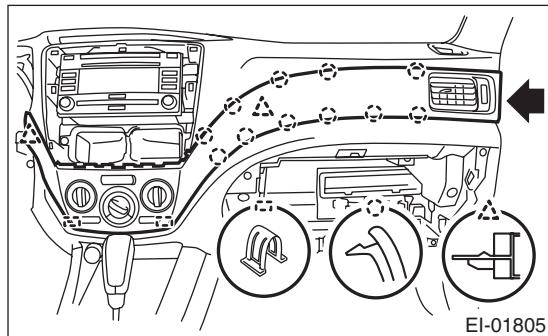


9) Disconnect connectors.

4. INSTRUMENT PANEL, LOWER

- 1) Remove the console box. <Ref. to EI-48, REMOVAL, Console Box.>
- 2) Remove the center panel. <Ref. to EI-49, CENTER PANEL, REMOVAL, Center Console.>
- 3) Remove the console front panel. <Ref. to EI-49, CONSOLE FRONT PANEL, REMOVAL, Center Console.>
- 4) Remove ornament panel RH. <Ref. to EI-49, ORNAMENT PANEL, REMOVAL, Center Console.>
- 5) Remove the instrument panel lower cover. <Ref. to EI-46, REMOVAL, Instrument Panel Lower Cover.>
- 6) Remove the glove box lid. <Ref. to EI-46, REMOVAL, Instrument Panel Lower Cover.>
- 7) Remove the screws and nuts, and remove the instrument panel lower.

NOTE:

The screws indicated with the white arrows are tightened from the opposing side.

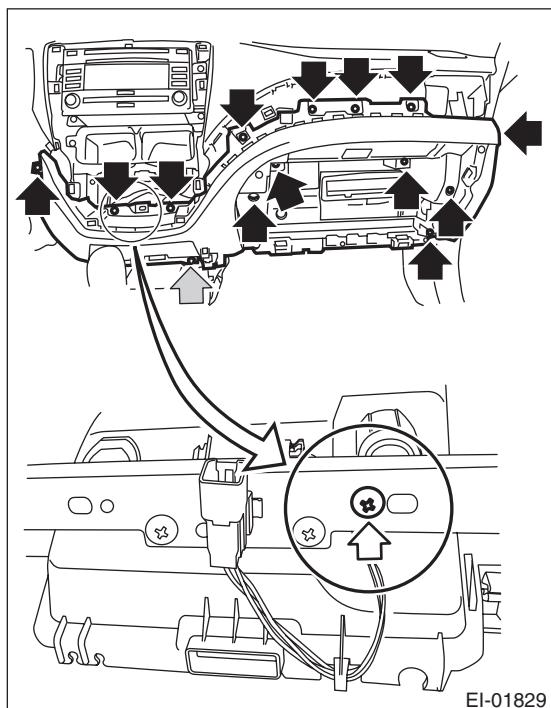

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)