


## 21.Upper Inner Trim

### A: REMOVAL

1) Remove the cap (B) on the upper side of the pillar trim, and remove the bolt.

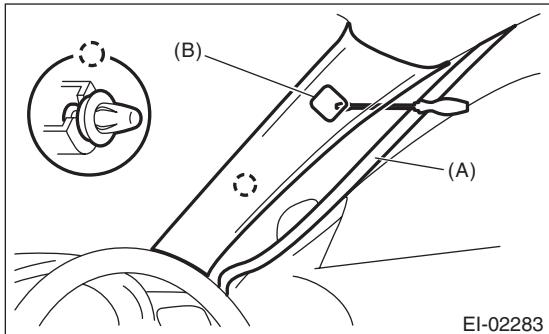


EI-02283

#### NOTE:


Remove the molding (A), and remove the cap from the backside of pillar trim not to damage the trim.

- 2) Remove the front pillar upper trim.
- 3) Remove the front inside scuff plate, rear inside scuff plate and center pillar lower trim. <Ref. to EI-55, REMOVAL, Lower Inner Trim.>
- 4) Remove anchor bolt cover (A).
- 5) Loosen the shoulder anchor bolt (B), and then detach the shoulder anchor from center pillar.

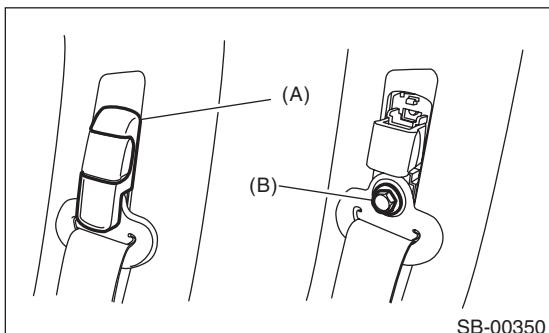

SB-00350

6) Remove the cap (B) on the upper side of the pillar trim, and remove the bolt.

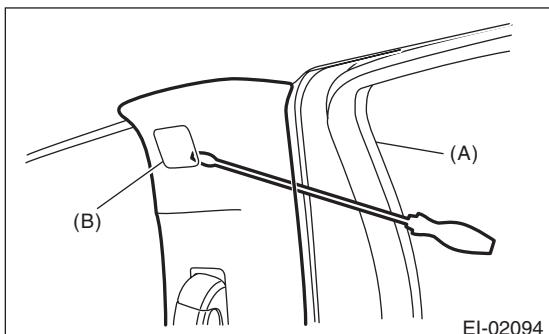

EI-02094

#### NOTE:


Remove the molding (A), and remove the cap from the backside of pillar trim not to damage the trim.

7) Pull and remove the upper trim clip section of the center pillar along with the lower trim.



EI-02095

8) Spread the lower trim outwards to remove the claw, and pull on the upper trim to remove.

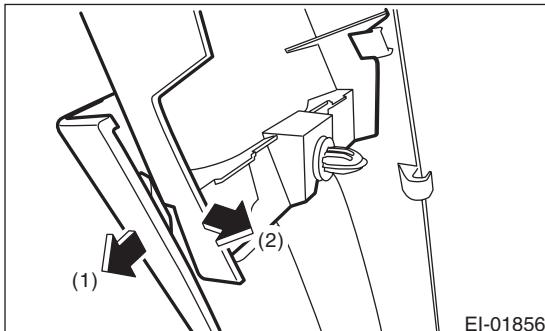

EI-01856

### B: INSTALLATION

Install in the reverse order of removal.

#### Tightening torque

Refer to “COMPONENT” of “General Description”.

**Upper inner trim (5 door model):**<Ref. to EI-19, INNER TRIM (5 DOOR MODEL), COMPONENT, General Description.>

**Upper inner trim (4 door model):**<Ref. to EI-20, INNER TRIM (4 DOOR MODEL), COMPONENT, General Description.>

**Seat belt anchor:**<Ref. to SB-2, FRONT SEAT BELT, COMPONENT, General Description.>