


### 32. Heat Shield Cover

#### A: REMOVAL

##### 1. FRONT HEAT SHIELD COVER



- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from oxygen (A/F) sensor.
- Turbo model:<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
- Non-turbo model:<Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
- 3) Remove the exhaust pipe.
- Turbo model:<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.>
- Non-turbo model:<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.>
- 4) Remove the four bolts to remove the front heat shield cover.

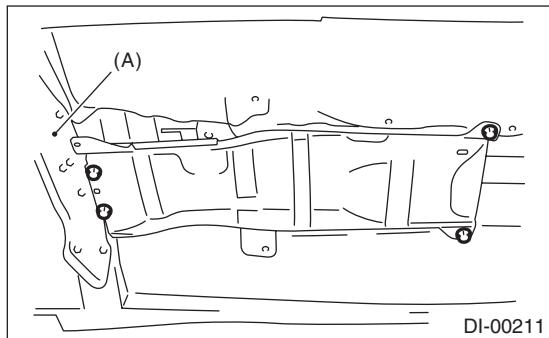

(A) Transmission mount


##### 2. CENTER HEAT SHIELD COVER

- 1) Remove the rear exhaust pipe.
- Turbo model:<Ref. to EX(H4DOTC)-14, REMOVAL, Rear Exhaust Pipe.>
- Non-turbo model:<Ref. to EX(H4SO)-10, REMOVAL, Rear Exhaust Pipe.>
- 2) Remove the propeller shaft. (Turbo model only) <Ref. to DS-10, REMOVAL, Propeller Shaft.>
- 3) Remove the bolt (A), nut (B) and clip (C) to remove center heat shield cover.

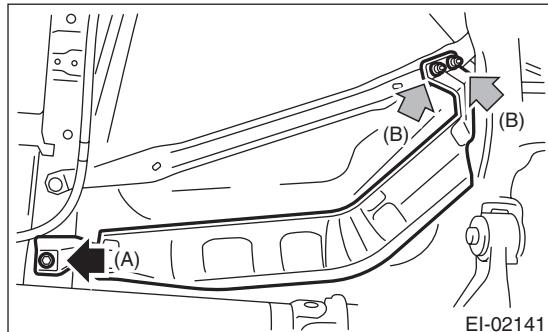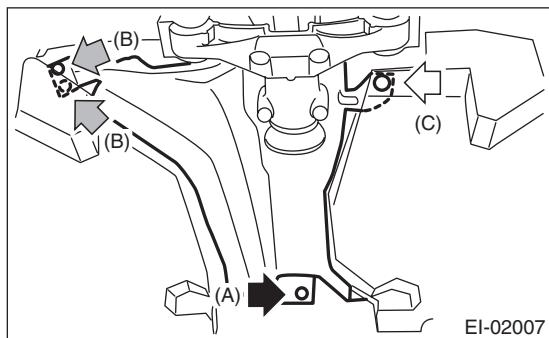


#### 3. REAR HEAT SHIELD COVER

- 1) Remove the muffler.
- Turbo model:<Ref. to EX(H4DOTC)-16, REMOVAL, Muffler.>
- Non-turbo model:<Ref. to EX(H4SO)-12, REMOVAL, Muffler.>
- 2) Remove the bolts, and remove the rear heat shield cover.
- 5 DOOR MODEL

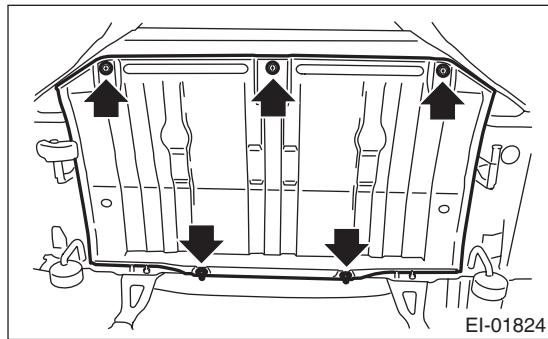

#### • 4 DOOR MODEL

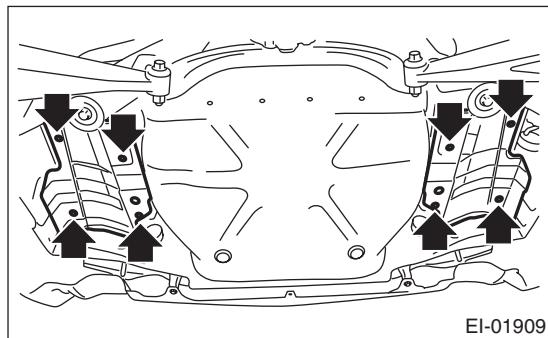

#### B: INSTALLATION

Install in the reverse order of removal.

##### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to EI-23, HEAT SHIELD COVER, COMPONENT, General Description.>*