
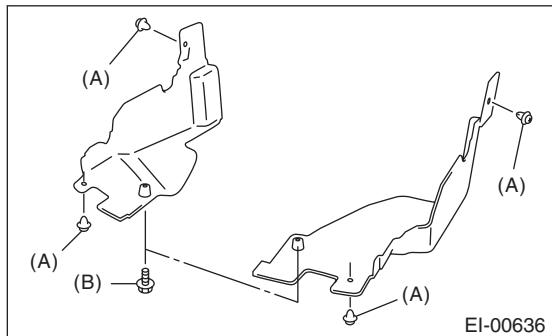


## 4. Front Under Cover

### A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove clips (A) and (C), and bolts (B) in the front fender, then remove the front under cover.

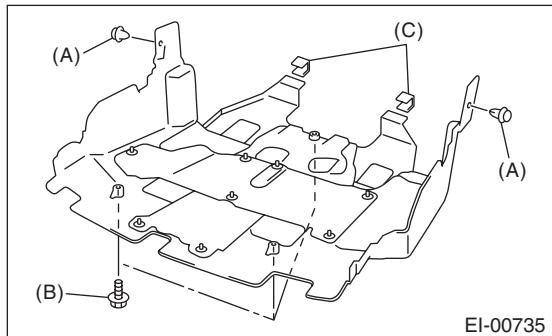

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***18 N·m (1.84 kgf·m, 13.3 ft-lb)***