


12. Rear Regulator and Motor Assembly

A: REMOVAL

- 1) Remove the rear door glass. <Ref. to GW-18, REMOVAL, Rear Door Glass.>
- 2) Disconnect the motor connector.
- 3) Remove six bolts to remove the rear regulator and motor assembly.

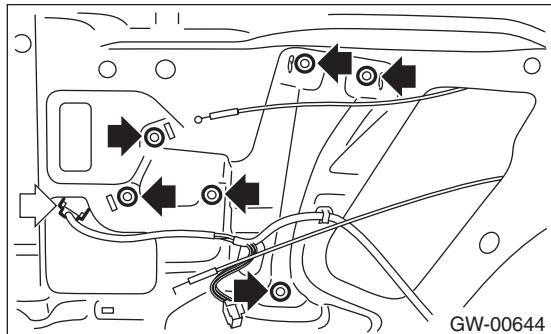

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-5, REAR DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Check to ensure that the power window motor rotates properly when the battery voltage is applied to motor connector terminal.
- 2) Check to ensure that the motor rotates in the other direction when the terminal which battery voltage is applied to is changed.