

18. Rearview Mirror

A: REMOVAL


CAUTION:

- Never reuse the spring. When the rearview mirror assembly is removed from the mirror base, fixed force will decline and the rearview mirror assembly may come off.
- Be careful not to damage the mirror surface and windshield glass.


NOTE:

Never reuse the spring. Prepare a new spring before removal.

- 1) Turn the mirror base 90° clockwise or counter-clockwise to remove it.

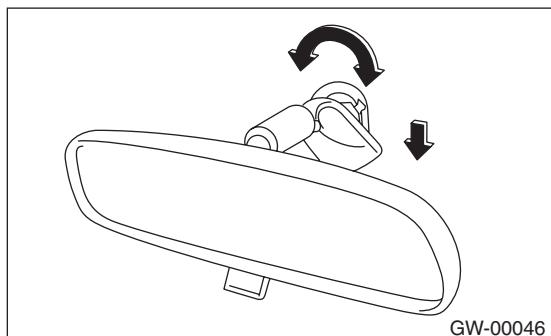

- 2) Remove the spring from the mirror base.

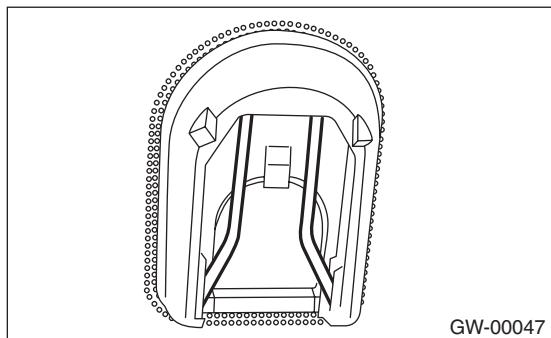

- 3) When the mirror base is damaged, use a piano wire, spatula, etc. to remove.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

If the mirror base is removed, install it in the following procedure.

1. Clean the old adhesive completely.
2. Align the mirror base with the mark on the windshield glass to install it.
3. Make sure the mirror base is securely attached and then install the spring to it.

Adhesive:

REPAIR KIT IN MR (Part No. 65029FC000) or equivalent

C: INSPECTION

- Make sure the mirror is not damaged.
- Make sure the spring is not damaged.
- Make sure the mirror base is not damaged.