

## 2. Power Window System

### A: WIRING DIAGRAM

Refer to "Power Window System" in WI section. <Ref. to WI-126, WIRING DIAGRAM, Power Window System.>

### B: INSPECTION

Symptoms	Repair order
All power windows do not operate.	1. Fuse (SBF-4) 2. Power window circuit breaker 3. Power window relay 4. Wiring harness
Particular window does not operate.	1. Power window main switch 2. Power window sub-switch 3. Power window motor 4. Wiring harness
"Window Lock" does not operate.	Power window main switch

### C: NOTE

For procedure of each component in the power window system, refer to the respective section.

- Power window control switch <Ref. to GW-9, Power Window Control Switch.>
- Front door glass <Ref. to GW-11, Front Door Glass.>
- Front regulator & motor assembly <Ref. to GW-12, Front Regulator and Motor Assembly.>
- Rear door glass <Ref. to GW-18, Rear Door Glass.>
- Rear regulator & motor assembly <Ref. to GW-19, Rear Regulator and Motor Assembly.>