


4. Front Door Glass

A: REMOVAL


- 1) Remove the front door trim. <Ref. to EI-43, RE-MOVAL, Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-21, RE-MOVAL, Front Sealing Cover.>
- 3) Operate the power window switch to move the glass, and remove the two bolts.

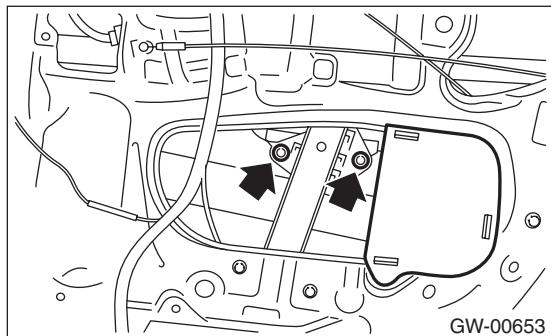

- 4) Tilt the door glass forward and remove the door glass from the glass run rubber.
- 5) Remove the door glass while tilting.

CAUTION:

Avoid impact and damage to the glass.

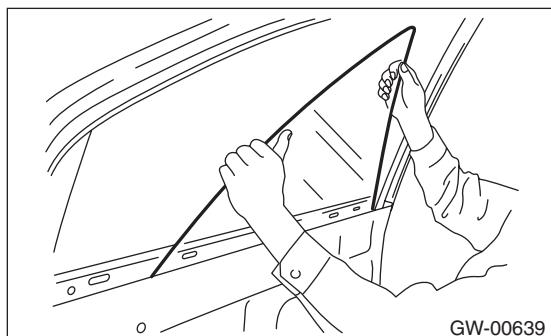

B: INSTALLATION

CAUTION:

Make sure that the glass run rubber is placed securely in door frame and sash.

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>