


5. Front Regulator and Motor Assembly

A: REMOVAL

- 1) Remove the door glass. <Ref. to GW-11, REMOVAL, Front Door Glass.>
- 2) Disconnect the motor connector.
- 3) Remove seven bolts to remove the front regulator and motor assembly.

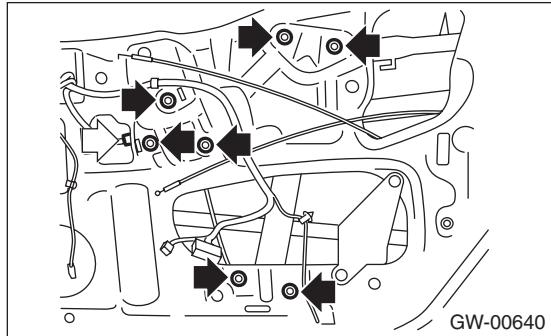

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-4, FRONT DOOR GLASS, COMPONENT, General Description.>

C: INSPECTION

- 1) Check to ensure that the power window motor rotates properly when the battery voltage is applied to motor connector terminal.
- 2) Check to ensure that the motor rotates in the other direction when the terminal which battery voltage is applied to is changed.