

6. Remote Control Mirror System

A: WIRING DIAGRAM

Refer to "Remote Control Mirror System" in WI section. <Ref. to WI-130, WIRING DIAGRAM, Remote Control Mirror System.>

B: INSPECTION

Symptoms	Repair order
All function does not operate.	1. Check the fuse. 2. Check the remote control mirror switch. 3. Check the wiring harness.
One side of the mirror motor does not operate.	1. Check the remote control mirror switch. 2. Check the mirror motor. 3. Check the wiring harness.
Mirror heater does not operate.	1. Check the defogger switch. 2. Check the mirror heater. 3. Check the wiring harness.

NOTE:

The mirror heater operates simultaneously with the rear window defogger. Refer to the inspection procedure of rear window defogger system. <Ref. to GW-29, INSPECTION, Rear Window Defogger System.>

C: NOTE

For procedure of each component in the remote control mirror system, refer to the respective section.

- Scalp cap <Ref. to GW-14, Scalp Cap.>
- Outer mirror assembly <Ref. to GW-15, Outer Mirror Assembly.>
- Outer mirror <Ref. to GW-16, Outer Mirror.>
- Remote control mirror switch <Ref. to GW-17, Remote Control Mirror Switch.>