



7. Scalp Cap

A: REPLACEMENT

- 1) Remove the mirror. <Ref. to GW-16, REPLACEMENT, Outer Mirror.>
- 2) Press-in the clips (A) from inside of outer mirror.

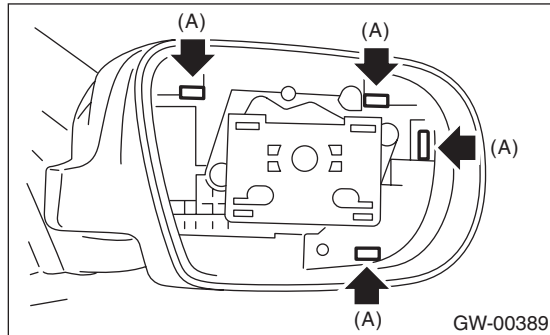

- 3) Pull the scalp cap towards the front of the outer mirror, then remove the scalp cap.
- 4) Align clips (A) on the reverse side of the scalp cap and the clip attachment hole of the outer mirror, and push the scalp cap in.

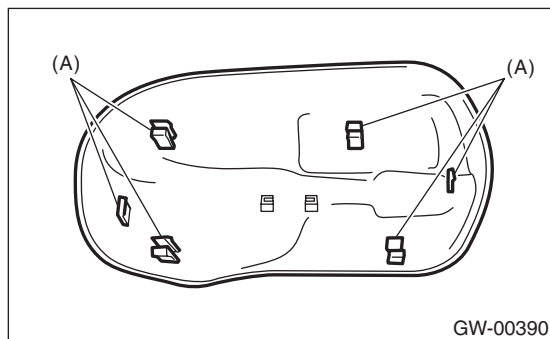

- 5) Install the scalp cap and lower cover securely.