


Control Unit (Auto A/C Model)

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

13. Control Unit (Auto A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the ornament panel. <Ref. to EI-49, ORNAMENT PANEL, REMOVAL, Center Console.>
- 3) Remove the screws and claws, and remove the control module from the ornament panel.

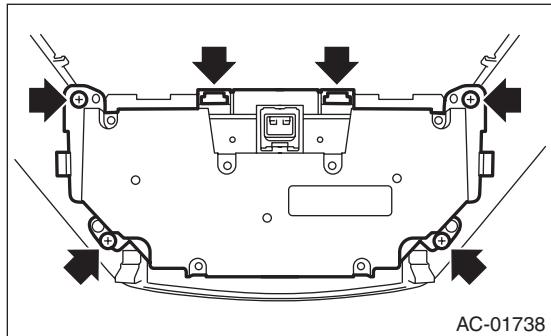

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to AC-9, CONTROL MODULE, COMPONENT, General Description.>