


Condenser

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


15. Condenser

A: REMOVAL

- 1) Using the refrigerant recovery system, discharge refrigerant. *<Ref. to AC-20, PROCEDURE, Refrigerant Recovery Procedure.>*
- 2) Disconnect the ground cable from battery.
- 3) Disconnect the pressure hose and pipe from the condenser.

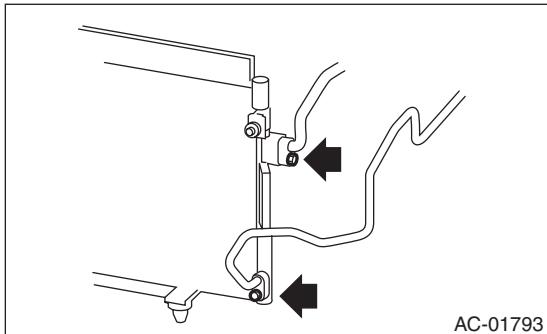

- 4) Remove the radiator bracket.

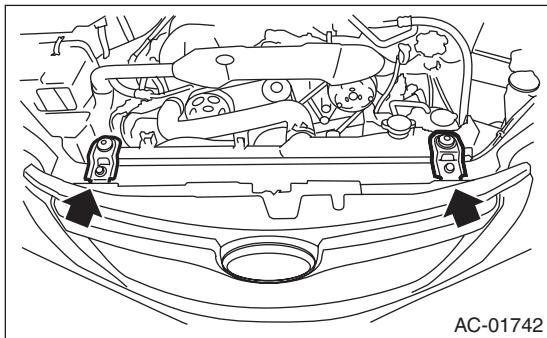


- 5) Remove the front bumper face. *<Ref. to EI-29, FRONT BUMPER FACE, REMOVAL, Front Bumper.>*
- 6) Remove two bolts. While lifting the condenser, pull out through space between the radiator and the radiator panel.

CAUTION:

- Be careful not to damage the condenser fins. If a damaged fin is found, repair it using a thin screwdriver.


- If the condenser is replaced, add an appropriate amount of compressor oil to the compressor. *<Ref. to AC-25, REPLACEMENT, Compressor Oil.>*

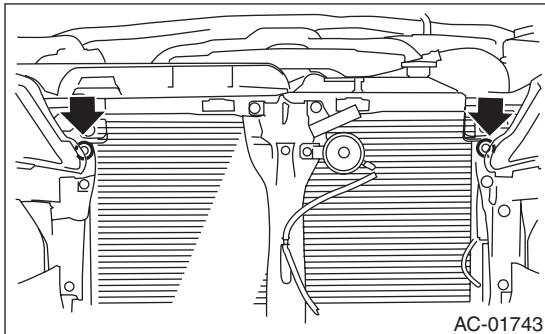

B: INSTALLATION

CAUTION:

- Replace the O-rings on hoses or pipes with new parts, and then apply compressor oil.
- Confirm that lower guide (A) of condenser fits into holes on radiator panel.

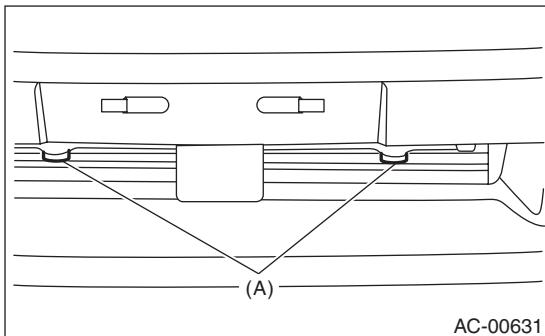

- 1) Install in the reverse order of removal.
- 2) Charge refrigerant. *<Ref. to AC-21, PROCEDURE, Refrigerant Charging Procedure.>*

Tightening torque:

Refer to "COMPONENT" of "General Description". *<Ref. to AC-11, AIR CONDITIONING UNIT, COMPONENT, General Description.>* *<Ref. to CO(H4DOTC)-4, RADIATOR AND RADIATOR FAN, COMPONENT, General Description.>* *<Ref. to CO(H4SO)-4, RADIATOR & RADIATOR FAN, COMPONENT, General Description.>*

C: INSPECTION

- 1) Check to see that the condenser fins are not clogged with debris or insects. Blow with compressed air or flush fins with water as needed.
- 2) Inspect for oil leakage from the condenser. If a failure is found, replace the condenser with a new part.