


19. Relay and Fuse


A: LOCATION

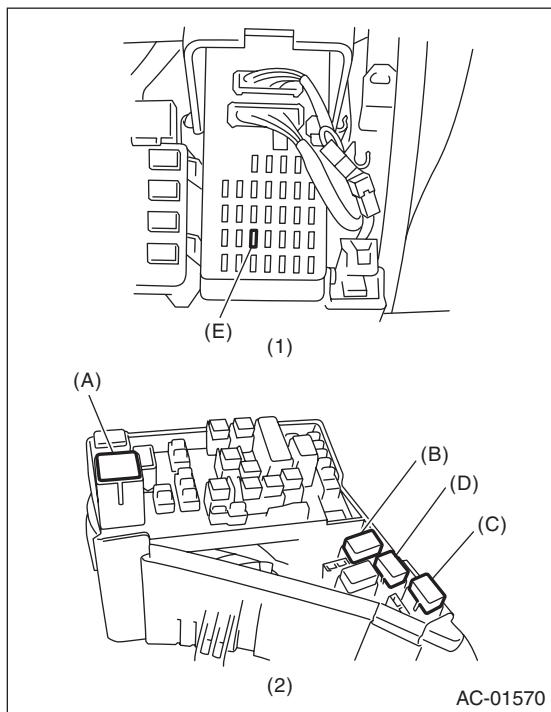

- (1) Joint box
- (2) Main fuse box

Main fan relay 1	(A)
Main fan relay 2	(B)
Sub fan relay	(C)
A/C relay	(D)
A/C fuse	(E)

B: INSPECTION

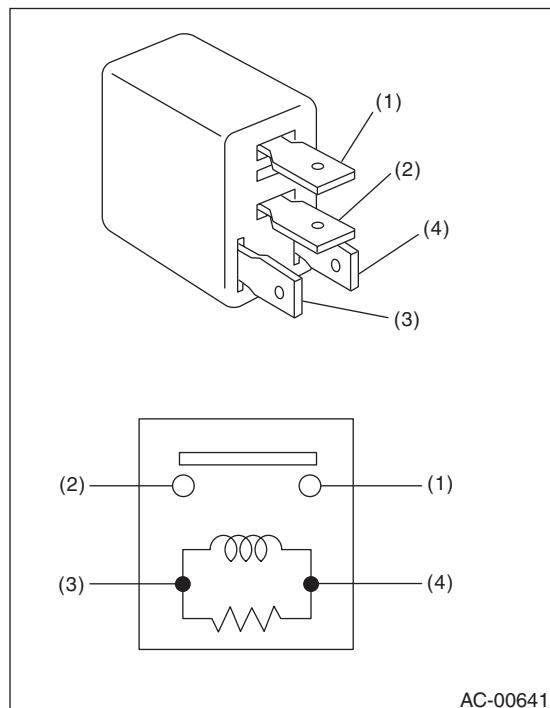

- (3) — (4): Continuity exists
- (1) — (2): Continuity does not exist

- 1) While applying battery voltage to the terminal between (3) and (4), check for continuity between (1) and (2).
- 2) Replace the relay if faulty.