


### 21. Ambient Sensor (Auto A/C Model)

#### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the ambient sensor connector.
- 3) Remove the ambient sensor from the radiator lower panel.

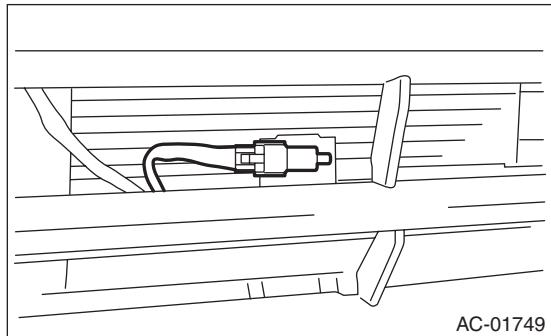

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

Refer to "Ambient Sensor" of HVAC SYSTEM (AUTO A/C)(DIAGNOSTICS). <Ref. to AC(diag)-28, AMBIENT SENSOR, Diagnostic Procedure for Sensors.>