


26. Heater Vent Duct

A: REMOVAL

- 1) Remove the instrument panel. <Ref. to EI-52, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the screws, and then remove the heater vent duct.

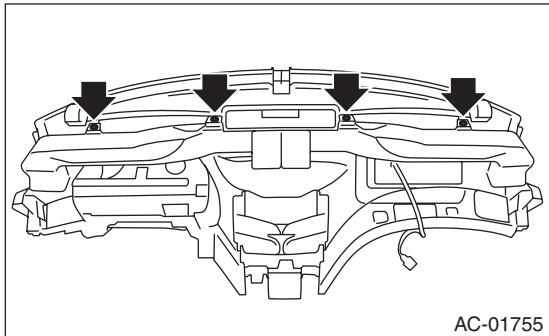

B: INSTALLATION

Install in the reverse order of removal.