



7. Blower Motor Unit Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the instrument panel lower. <Ref. to EI-51, INSTRUMENT PANEL, LOWER, REMOVAL, Center Console.>
- 3) Remove the engine ECM protect cover.

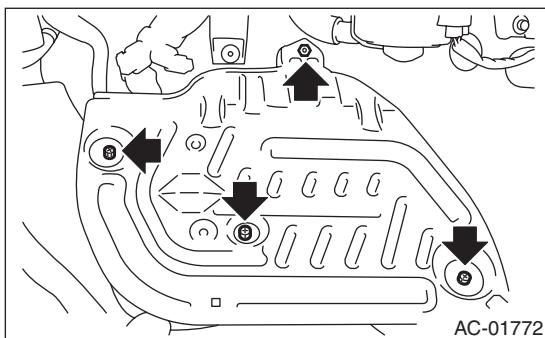

- 4) Disconnect the intake door actuator and blower motor harness connectors.
- 5) Remove the relay holder.
- 6) Remove the bolts and nuts to remove blower motor unit assembly.

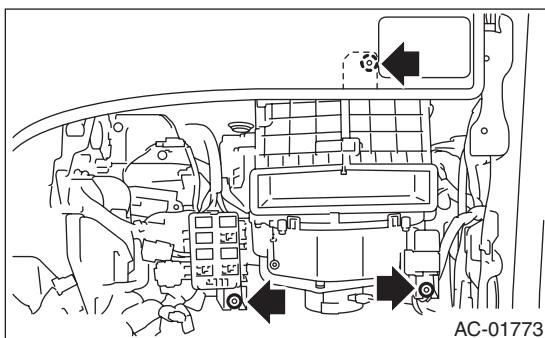

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to AC-6, HEATER COOLING UNIT, COMPONENT, General Description.>
<Ref. to AC-8, BLOWER MOTOR UNIT, COMPONENT, General Description.>