

6. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. ECM

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Engine Control System}.
- 3) Select [OK] after the information of engine type is displayed.
- 4) On «Engine Diagnosis» display, select {Diagnostic Code(s) Display}.
- 5) On «Diagnostic Code(s) Display» display, select {Current DTC} or {Past DTC}.

NOTE:

- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.
- For detailed concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-15, LIST, List of Diagnostic Trouble Code (DTC).>

2. BODY INTEGRATED UNIT

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Integ. Unit}.
- 3) After {Integ. unit} is displayed, select [OK].
- 4) On «Integ. unit mode failure diag» display, select {Diagnostic Code(s) Display}.

NOTE:

- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.
- For detailed concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-15, LIST, List of Diagnostic Trouble Code (DTC).>