

General Description

INSTRUMENTATION/DRIVER INFO

1. General Description

A: SPECIFICATION

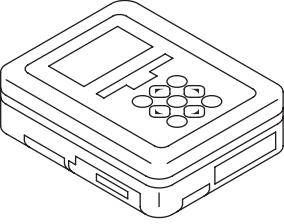
Combination meter	Speedometer	Stepping motor type
	Tachometer	
	Engine coolant temperature gauge (turbo model)	
	Fuel gauge	
	Malfunction indicator light	
	Oil pressure warning light	
	ATF temperature warning light	
	ABS warning light	
	Engine coolant temperature indicator light (non-turbo model)	
	Engine coolant temperature warning light (non-turbo model)	
	Airbag warning light	
	Seat belt warning light	
	Door open warning light	
	Brake fluid and parking brake warning light	
	Fuel level warning light	
	Charge warning light	
	AWD warning light (AT model)	
	Hill start assist warning light (MT model with VDC)	LED
	Tire pressure warning light	
	Vehicle dynamics control (VDC) warning light	
	Vehicle dynamics control (VDC) indicator light	
	Turn signal indicator light	
	HI-beam indicator light	
	Security and immobilizer indicator light	
	Cruise indicator light	
	Cruise set indicator light	
	Front fog light indicator light	
	SPORT indicator light (AT model)	
	Light illumination indicator light (turbo model)	
	Meter illumination back light	
	LCD back light	
Clock	Odo/trip meter	LCD
	SPORT shift indicator (AT model)	
	AT select lever position indicator	
	Average fuel economy, Ambient air temperature, Current time, Malfunction warning display	VFD
Passenger's airbag	Passenger's airbag ON indicator	LED
	Passenger's airbag OFF indicator	
	Passenger's seat belt warning light	

B: CAUTION

- Be careful not to damage the meters and instrument panel.
- Be careful not to damage the meter glass.
- Make sure the electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply an excessive force on the printed circuit.
- Do not drop or otherwise apply impact.
- When the combination meter of model with immobilizer has been replaced, be sure to perform the registration of immobilizer.

C: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B022XU0	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.