


## 9. Clock

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the audio. <Ref. to ET-6, REMOVAL, Audio.>
- 3) Reach through the audio space to release the four tabs from the bracket behind the instrument panel.

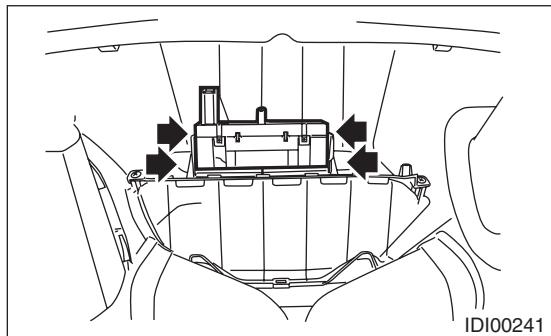

- 4) Disconnect the harness connector and remove the clock.

### B: INSTALLATION

Install in the reverse order of removal.

# SEATS

**SE**

---

	Page
1. General Description .....	2
2. Front Seat .....	6
3. Rear Seat .....	12
4. Seat Heater System .....	15