

General Description

LIGHTING SYSTEM

1. General Description

A: SPECIFICATION

Headlight	Halogen type low beam	12 V — 55 W
	HID type low beam	12 V — 35 W
	Halogen type high beam	12 V — 60 W
Front turn signal light		12 V — 27 W
Clearance/parking light		12 V — 8 W
Front fog light		12 V — 51 W
Rear combination light (4 door)	Tail/stop light	12 V — 5/21 W
	Turn signal light	12 V — 21 W
	Back-up light	12 V — 16 W
Rear combination light (5 door)	Tail/stop light	12 V — 0.3 W (LED) / 12 V — 4.8 W (LED)
	Turn signal light	12 V — 21 W
	Side marker light	12 V — 5 W
Back-up light (5 door)		12 V — 21 W
License plate light		12 V — 5 W
High-mounted stop light	4 door with built-in rear spoiler	12 V — 1.2 W (LED)
	4 door standard type	12 V — 21 W
	5 door small type with built-in roof spoiler	12 V — 2.7 W (LED)
	5 door large type with built-in roof spoiler	12 V — 1.2 W (LED)
Room light		12 V — 8 W
Spot map light		12 V — 8 W
Luggage room light		12 V — 5 W
Trunk room light		12 V — 5 W

B: CAUTION

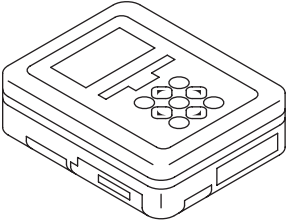
- Before removing or installing parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

WARNING:

- **The airbag system wiring harness is routed near electrical parts and switches. Do not use electrical test devices on any airbag system wiring harnesses or connector circuits.**
- **Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.**

C: PREPARATION TOOL

1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 <p>ST1B022XU0</p>	1B022XU0	SUBARU SELECT MONITOR III KIT	Used for troubleshooting the electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.