


14. Clearance/Parking Light Bulb

A: REMOVAL

- 1) When removing the clearance/parking light bulb, fully turn the steering wheels to opposite direction from the turn signal light bulb to remove.
- 2) Disconnect the ground cable from battery.
- 3) Turn the mud guard inward.
- 4) Turn socket (A) from the wheel arch, and remove the clearance/parking light bulb.

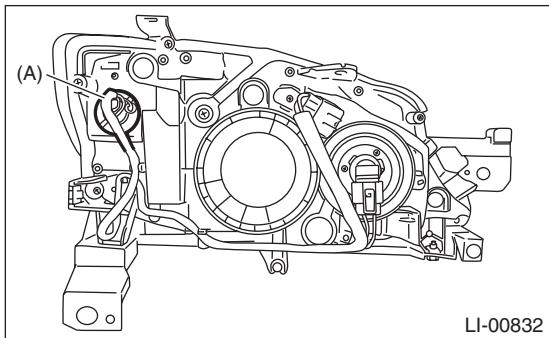

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.