


## 17. Rear Combination Light Assembly

### A: REMOVAL


#### 1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim. <Ref. to EI-61, REMOVAL, Trunk Room Trim.>
- 3) Remove the harness connector and four nuts, and remove the rear combination light.

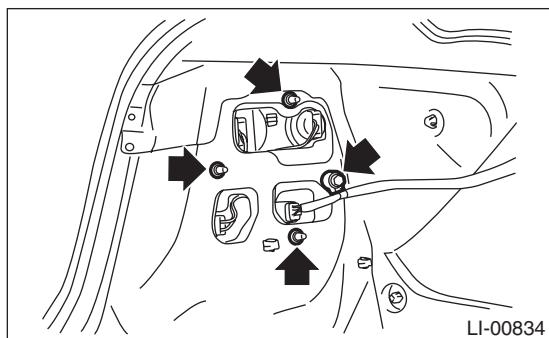

#### 2. 5 DOOR MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the two bolts, and then detach the rear combination light by pulling it to the rear side of vehicle.

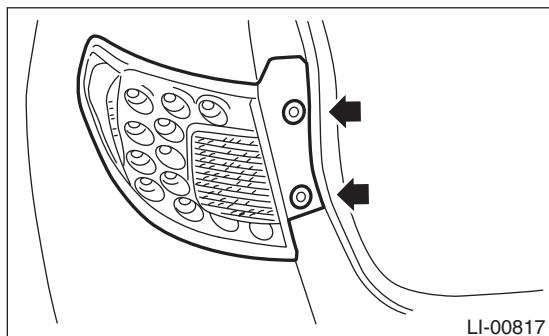

- 3) Disconnect the harness connector and rear combination light.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

### C: INSPECTION

#### 1. 4 DOOR MODEL

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

#### 2. 5 DOOR MODEL

- 1) Install the rear combination light assembly and check that it blinks normally.
- 2) If it does not blink normally, replace the rear combination light assembly with a new part.

#### NOTE:

Since LED (Light Emitting Diode) is used for the tail light/stop light bulb, replace the rear combination light assembly if the LED burns out.