


18. Tail/Stop Light Bulb

A: REMOVAL

1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room side trim cover. <Ref. to EI-61, REMOVAL, Trunk Room Trim.>
- 3) Turn the socket and remove the bulb.

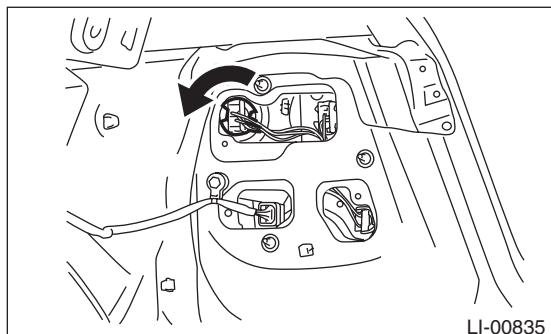

2. 5 DOOR MODEL

Since LED (Light Emitting Diode) is used for the tail light / stop light bulb, they can not be removed.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. 4 DOOR MODEL

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

2. 5 DOOR MODEL

- 1) Install the rear combination light assembly and check that it blinks normally.
- 2) If it does not blink normally, replace the rear combination light assembly with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the tail light/stop light bulb, replace the rear combination light assembly if the LED burns out.