
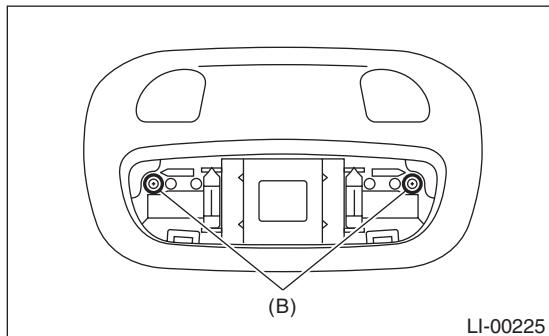




24. Spot Map Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the lens (A) and spot map light mounting screws (B).
- Model without sunroof

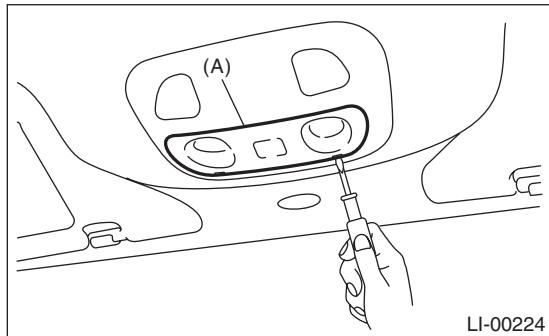

- Model with sunroof

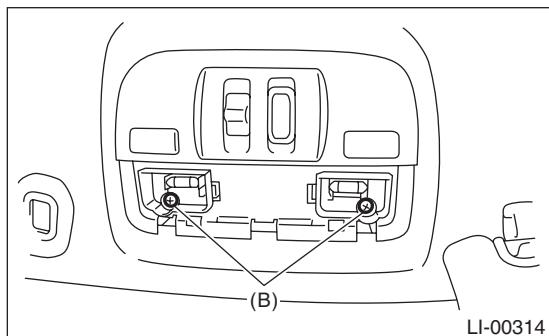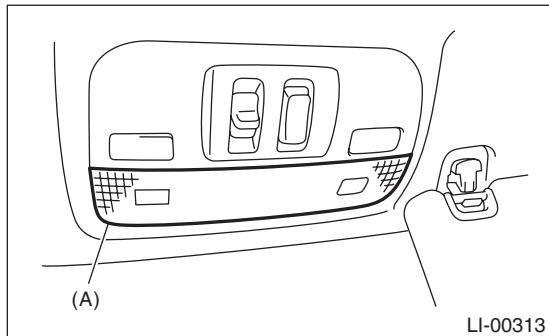

- 3) Disconnect the harness connectors and remove the spot map light.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


1. SPOT MAP LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description. >
- 3) If NG, replace the bulb with a new part.


2. SPOT MAP LIGHT SWITCH

Measure the spot map light resistance.

- Model without sunroof

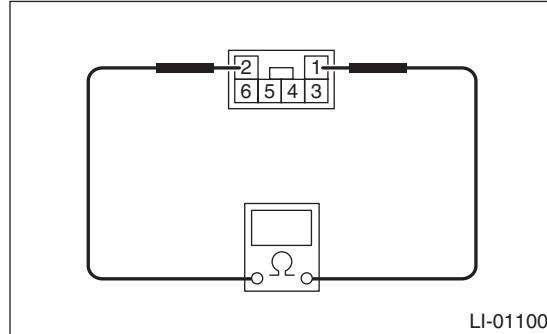

- Model with sunroof

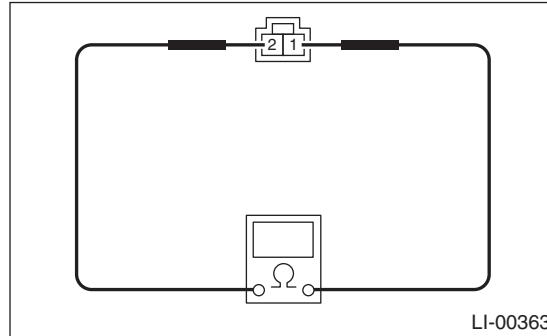

Switch position	Terminal No.	Standard
OFF	1 and 2	1 MΩ or more
ON	1 and 2	18±5.4 Ω

Replace the spot map light if faulty.