


## 30. Door Switch

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screw, and pull out the door switch.

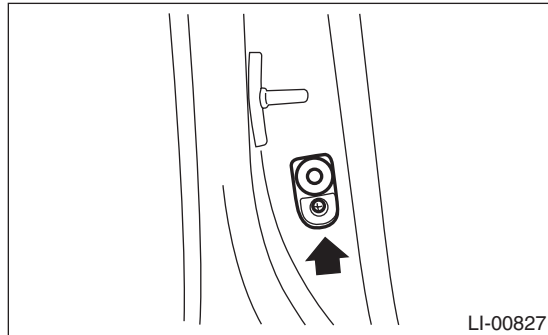

- 3) Disconnect the harness connector.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Refer to the door switch inspection of the room light system. <Ref. to LI-10, DOOR SWITCH, INSPECTION, Room Light System.>

## Door Switch

LIGHTING SYSTEM

---

# WIPER AND WASHER SYSTEMS



---

	Page
1. General Description .....	2
2. Wiper and Washer System .....	6
3. Combination Switch (Wiper) .....	7
4. Wiper Blade .....	11
5. Washer Tank and Motor .....	13
6. Front Wiper Arm .....	14
7. Front Wiper Motor and Link .....	15
8. Front Washer Nozzle .....	17
9. Rear Wiper Arm .....	18
10. Rear Wiper Motor .....	19
11. Rear Washer .....	20