

Front Fog Light System

LIGHTING SYSTEM

4. Front Fog Light System

A: WIRING DIAGRAM

Refer to "Front Fog Light System" in WI section.
<Ref. to WI-99, WIRING DIAGRAM, Front Fog Light System.>


B: INSPECTION

1. FRONT FOG LIGHT SWITCH

Measure the resistance between front fog light switch terminals. <Ref. to LI-12, FRONT FOG LIGHT SWITCH, INSPECTION, Combination Switch (Light).>

2. FRONT FOG LIGHT RELAY

Connect terminal No. 4 to battery positive terminal and terminal No. 3 to battery ground terminal, and measure the front fog light relay resistance between terminals.

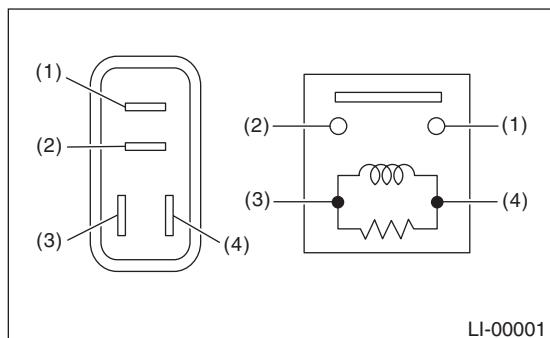

Continuity	Terminal No.	Standard
Yes	1 and 2	Less than 1 Ω
No		1 MΩ or more