



9. Combination Switch (Light)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the screws and remove the steering column cover lower.


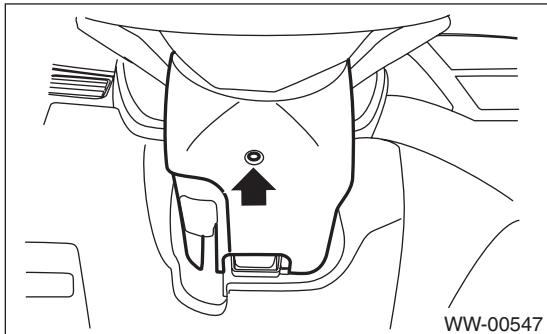


- 3) Remove the three mounting screws of steering column cover upper.

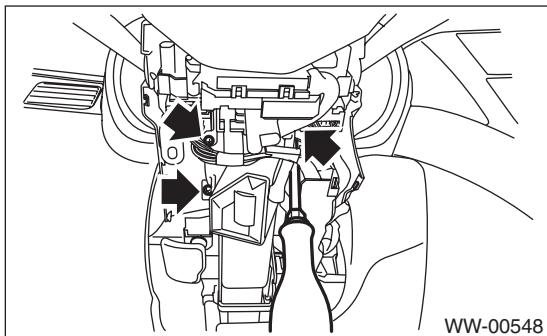


- 4) Disconnect the connector from combination switch.

- 5) Remove the three screws, and pull out the combination base switch assembly.

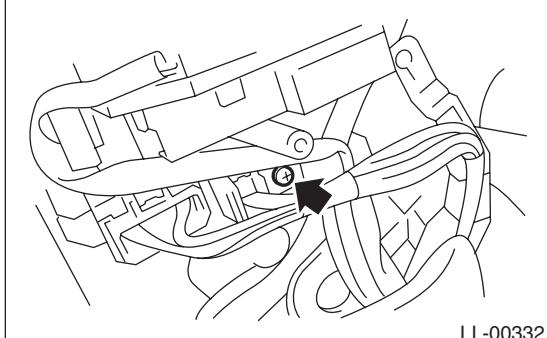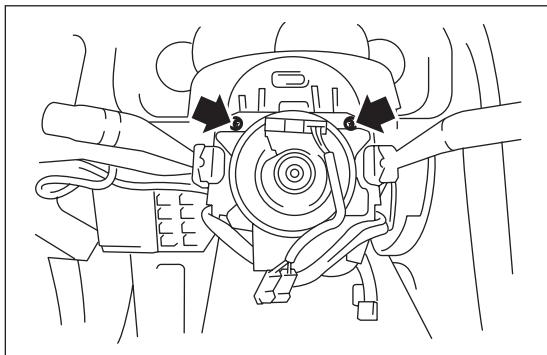

- 6) Remove the screws which secure the switch, then remove the combination switch.

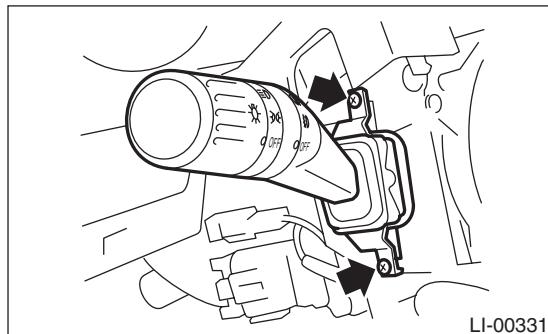


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between combination switch terminals.

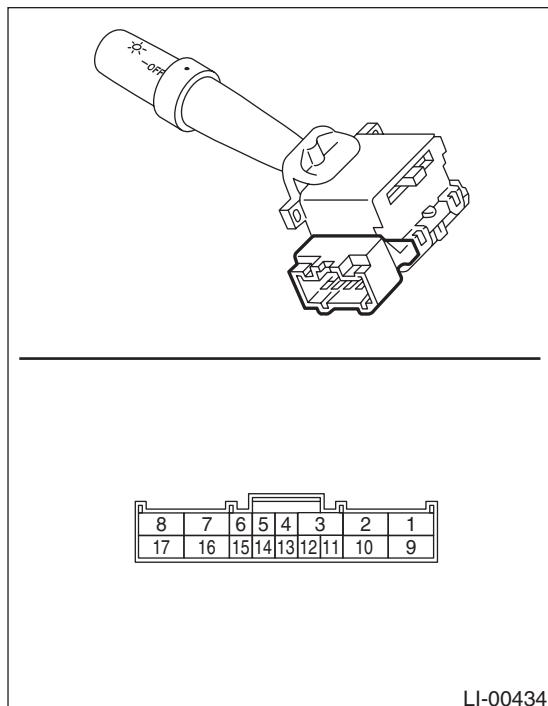

1. LIGHTING SWITCH

| Switch position | Terminal No. | Standard |
|-----------------|---------------|---------------|
| OFF | — | 1 MΩ or more |
| Tail | 14 and 16 | Less than 1 Ω |
| Head | 13, 14 and 16 | Less than 1 Ω |

Replace the combination switch (light) if faulty.

Combination Switch (Light)

LIGHTING SYSTEM

2. DIMMER & PASSING SWITCH

| Switch position | Terminal No. | Standard |
|-----------------|--------------|---------------|
| Passing | 7, 8 and 16 | Less than 1 Ω |
| High beam | 7 and 16 | Less than 1 Ω |

Replace the combination switch (light) if faulty.

3. TURN SIGNAL SWITCH

| Switch position | Terminal No. | Standard |
|-----------------|--------------|---------------|
| Left | 1 and 2 | Less than 1 Ω |
| Neutral | — | 1 MΩ or more |
| Right | 3 and 2 | Less than 1 Ω |

Replace the combination switch (light) if faulty.

4. FRONT FOG LIGHT SWITCH

| Switch position | Terminal No. | Standard |
|-----------------|--------------|---------------|
| OFF | 11 and 10 | 1 MΩ or more |
| ON | — | Less than 1 Ω |

Replace the combination switch (light) if faulty.