

## **Read Diagnostic Trouble Code (DTC)**

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

---

### **8. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

For details on reading DTCs, refer to “Airbag System (Diagnostics) Subaru Select Monitor”. <Ref. to AB(diag)-24, Subaru Select Monitor.>