


6. Rear Seat Belt

A: REMOVAL

1. OUTER SEAT BELT ASSEMBLY RH & LH


- 1) Remove the luggage floor mat.
- 2) Remove the rear seat cushion. <Ref. to SE-12, REMOVAL, Rear Seat.>
- 3) Remove the seat belt lower anchor bolt.

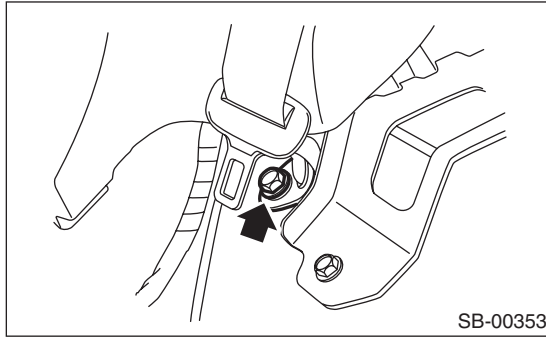

- 4) Remove the rear quarter trim. <Ref. to EI-58, REMOVAL, Rear Quarter Trim.>
- 5) Remove the outer seat belt assembly.


• 5 DOOR MODEL

Remove the nut.

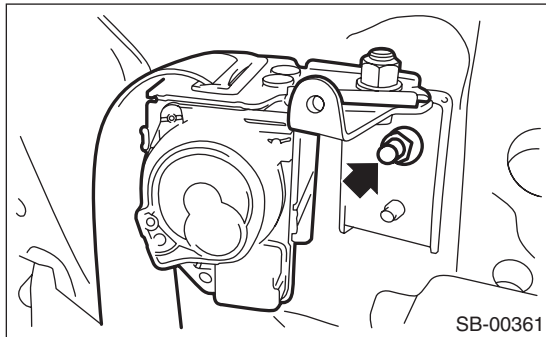


CAUTION:

Do not remove the bolt and nut securing the retractor and bracket.

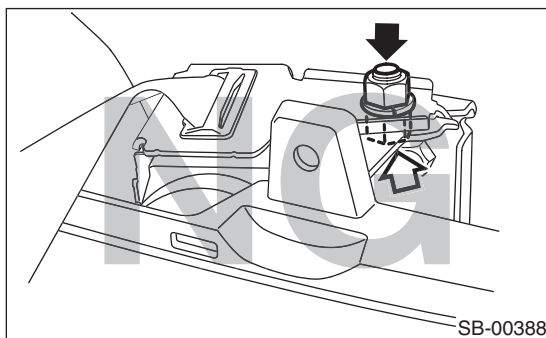


• 4 DOOR MODEL

Remove the bolt.

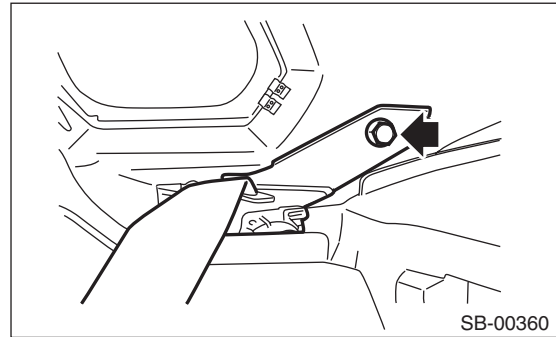


2. SHOULDER SEAT BELT CENTER ASSEMBLY (5 DOOR MODEL)

- 1) Remove the shoulder anchor bolt cover (A).
- 2) Remove the shoulder anchor bolt (B) and remove the shoulder anchor from the quarter pillar.

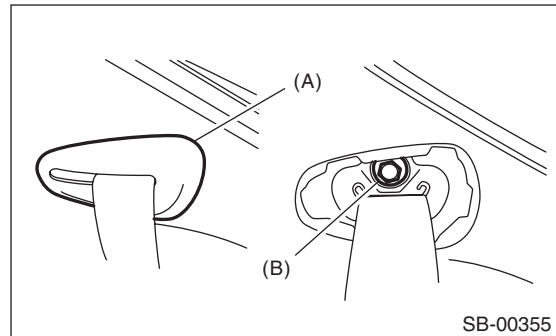

- 3) Remove the rear quarter trim. <Ref. to EI-58, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolts, and then detach the outer seat belt center assembly.

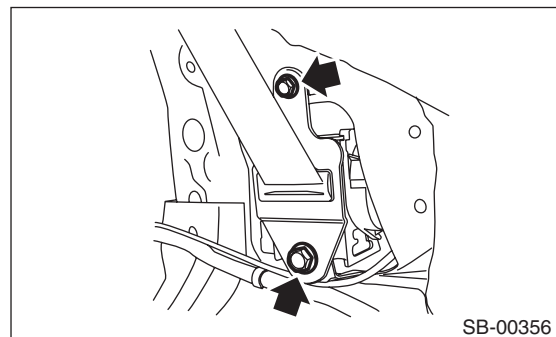


3. SHOULDER SEAT BELT CENTER ASSEMBLY (4 DOOR MODEL)

- 1) Remove the rear seat. <Ref. to SE-12, REMOVAL, Rear Seat.>
- 2) Remove the rear quarter trim. <Ref. to EI-58, REMOVAL, Rear Quarter Trim.>
- 3) Remove the rear shelf trim. <Ref. to EI-60, REMOVAL, Rear Shelf Trim.>


Rear Seat Belt

SEAT BELT SYSTEM

4) Remove the bolts, then remove the shoulder seat belt assembly.

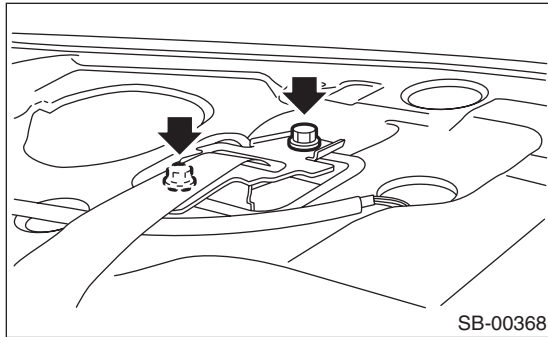


5) Remove the seat belt lower anchor bolt.

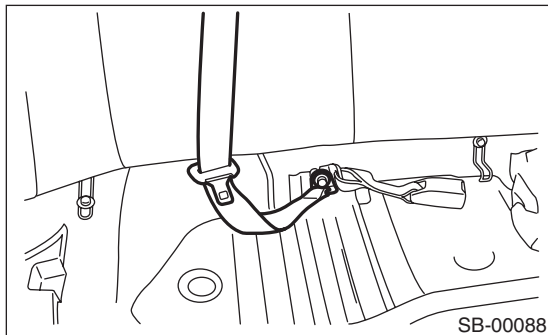

4. CENTER SEAT BELT ASSEMBLY

1) Remove the rear seat cushion.
2) Remove the bolts, then remove the center seat belt assembly.

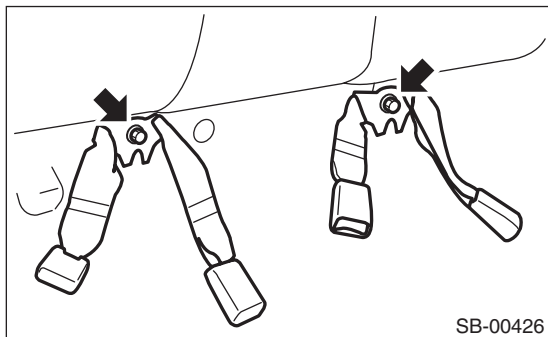

B: INSTALLATION

CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts are smoothly extended and wound.
- Make sure that the center seat belt is securely installed.


1) Install in the reverse order of removal.

Tightening torque:


Refer to "COMPONENT" of "General Description". <Ref. to SB-3, REAR SEAT BELT, COMPONENT, General Description.>

2) Turn the seat belt as shown in the figure.

• LH SIDE

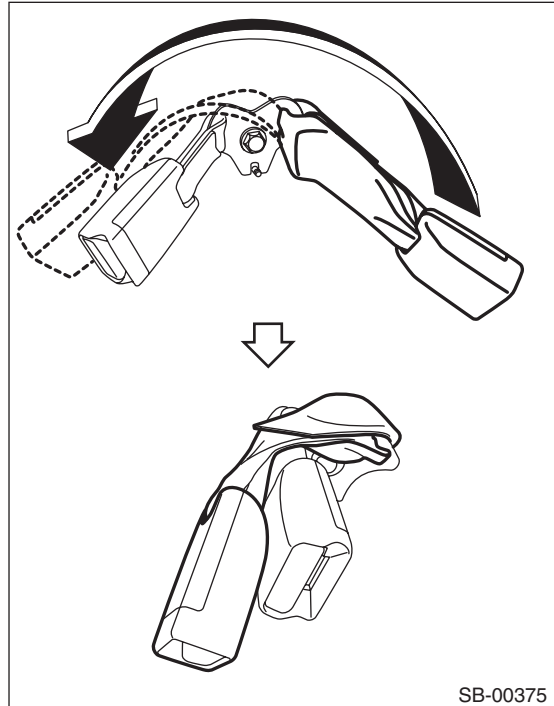


• RH SIDE (5 DOOR MODEL ONLY)

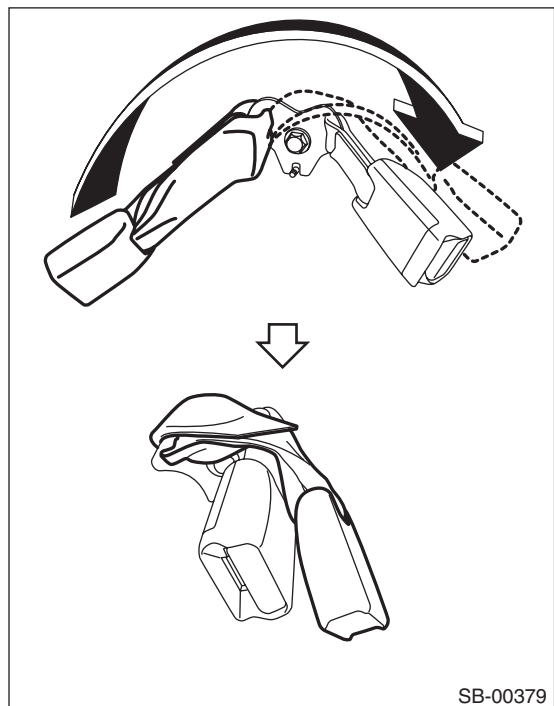


3) Install the seat cushion and pull out the center seat belt assembly.

- 5 DOOR MODEL

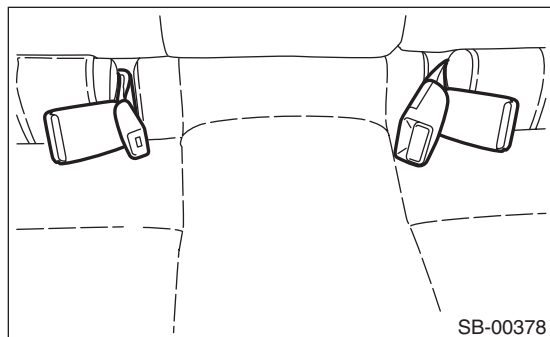

- 4 DOOR MODEL

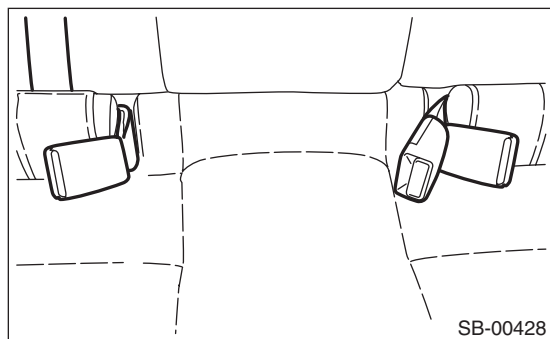

C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent or worn.
- Seat belt is abnormally wound or extended.
- Inner seat belt is deformed or damaged.
- Seat belt buckle cannot be engaged properly.

Rear Seat Belt

SEAT BELT SYSTEM

LIGHTING SYSTEM

LI

	Page
1. General Description	2
2. Headlight and Tail Light System	4
3. Day Time Running Light System	5
4. Front Fog Light System	6
5. Turn Signal Light and Hazard Light System	7
6. Back-up Light System	8
7. Stop Light System	9
8. Room Light System	10
9. Combination Switch (Light)	11
10. Combination Base Switch Assembly	13
11. Headlight Assembly	14
12. Headlight Bulb	16
13. Front Turn Signal Light Bulb	18
14. Clearance/Parking Light Bulb	19
15. Front Fog Light Assembly	20
16. Front Fog Light Bulb	22
17. Rear Combination Light Assembly	23
18. Tail/Stop Light Bulb	24
19. Rear Turn Signal Light Bulb	25
20. Rear Finisher Light Assembly	26
21. Back-up Light Bulb	27
22. License Plate Light	28
23. High-mounted Stop Light	29
24. Spot Map Light	30
25. Room Light	31
26. Luggage Room Light	32
27. Trunk Room Light	33
28. Ignition Switch Illumination	34
29. Reflex Reflector	36
30. Door Switch	37