


3. Rear Seat

A: REMOVAL

CAUTION:

- Airbag system satellite safing sensor is located in the lower of the rear seat cushion center. Read the cautions and warnings indicated in the AB section before removing the rear seat.
<Ref. to AB-5, CAUTION, General Description.>>
- The airbag system is fitted with a backup power supply. After disconnecting the battery ground cable, the airbag may deploy if you do not wait for 20 seconds before starting the service of airbag system.

1) Disconnect the ground cable from battery, and wait for 20 seconds or more before starting work.
2) Remove the rear seat cushion.

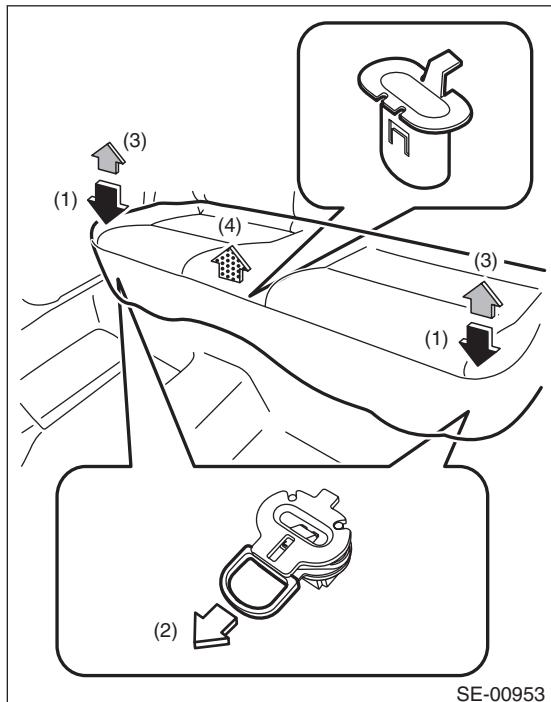


SE-00953

- (1) Press the corner of the seat cushion from above.
- (2) While pressing the corner of the seat cushion, pull the knob of the seat cushion hook toward you.
- (3) While pulling the knob toward you, detach the hook by lifting the seat cushion.
- (4) Pull up the front center part of the seat cushion and disconnect the center hook.


CAUTION:

If the center hook is disconnected from the vehicle body, replace the hook with the new part to prevent the decline of the fixed force of the seat.

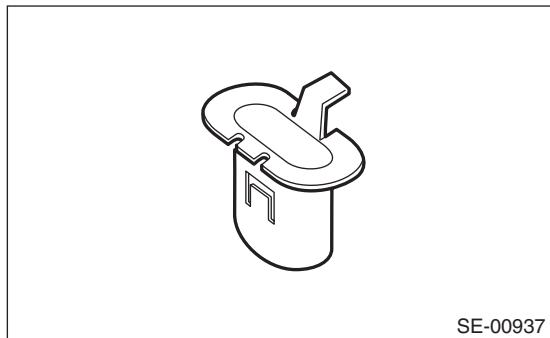


SE-00937

- (5) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

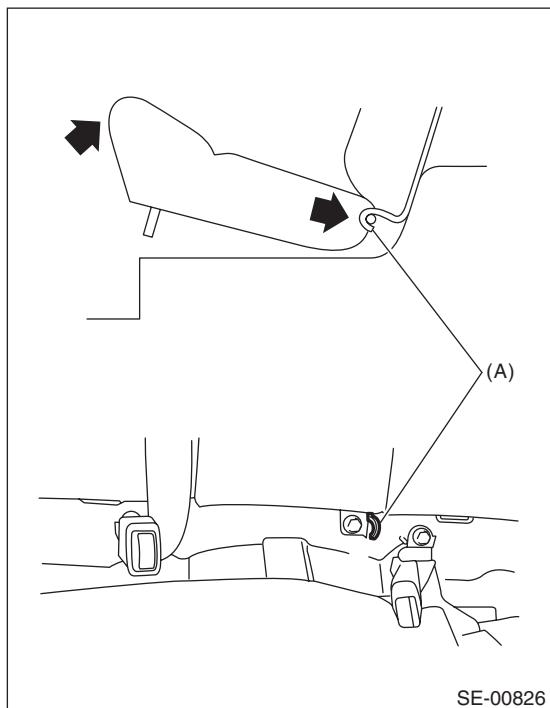


SE-00826

- 3) Remove the headrest, and then tilt the backrest forward.
- 4) Remove the luggage floor mat. (5 door model)
- 5) Turn over the mat to remove the bolt.

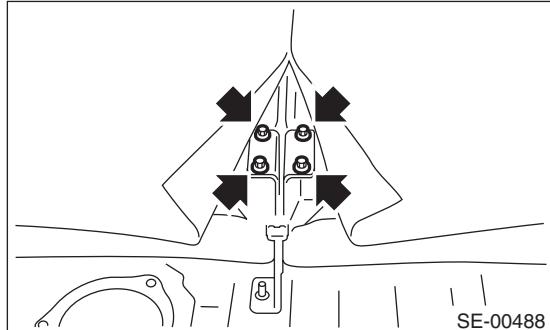

SE-00488

6) Remove the backrest from the hinge assembly LH (hinge assembly RH).

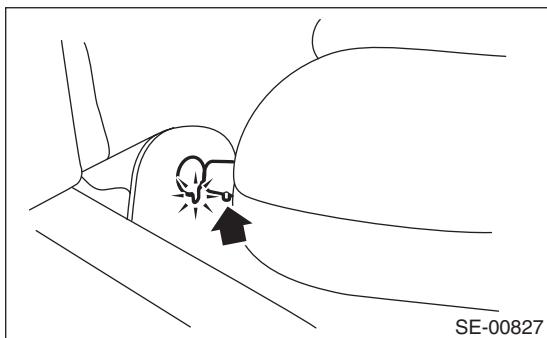


NOTE:

The backrest cannot be detached while the hinge assembly side and the backrest pin are not aligned.

B: INSTALLATION

CAUTION:

If the hooks on the vehicle body side disengage (remained on the seat cushion side), when the rear seat cushion is removed, always replace with new hooks.

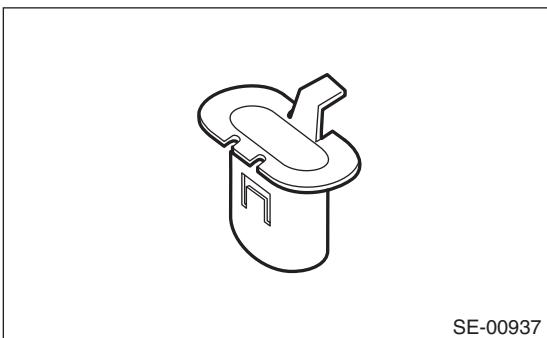


Install in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SE-4, REAR SEAT, COMPONENT, General Description.>


C: DISASSEMBLY

- 1) Remove the rear seat. <Ref. to SE-12, REMOVAL, Rear Seat.>
- 2) Remove the armrest hinge cover in the direction of arrow (black), and loosen the screws to remove the armrest.

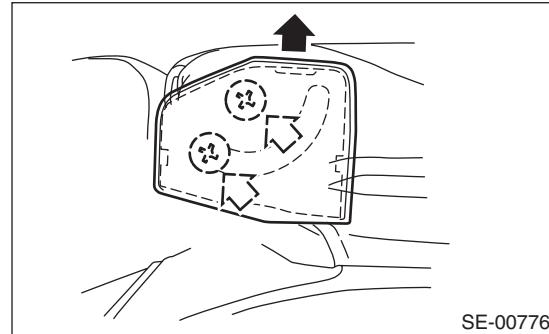


NOTE:

The armrests cannot be detached while the backrest assembly RH and armrest side pin positions are not aligned.

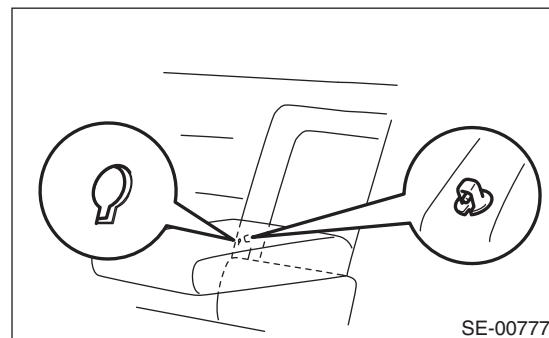


- 3) Remove the backrest knob. (Screw-in type) (5 door model)

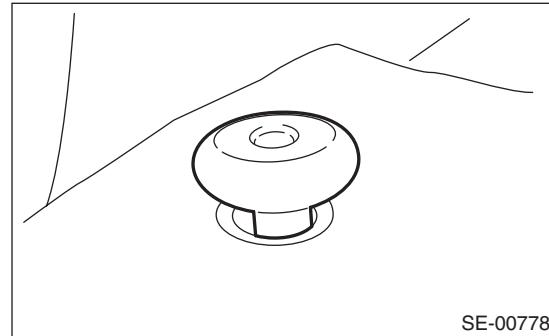

Rear Seat


SEATS

4) Remove the seat back latch cover.

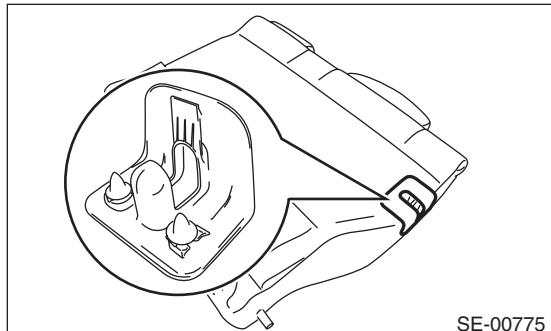

SE-00775

5) Peel the backrest cover, and remove the hog rings.

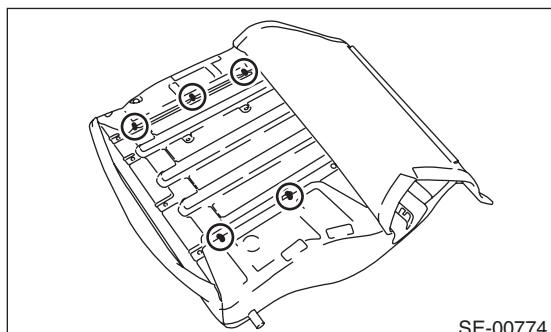

SE-00774

6) Remove all the hog rings which fix the backrest frame and backrest pad.


7) Remove the headrest bushing.

8) Remove the backrest pad and backrest cover from the backrest frame.

9) Disassemble the backrest assembly LH following the procedures described above.


10) Remove all the hog rings of the seat cushion, and separate the seat cushion cover and seat cushion pad.

11) Open the plastic fastener, and then remove the headrest cover from the headrest.

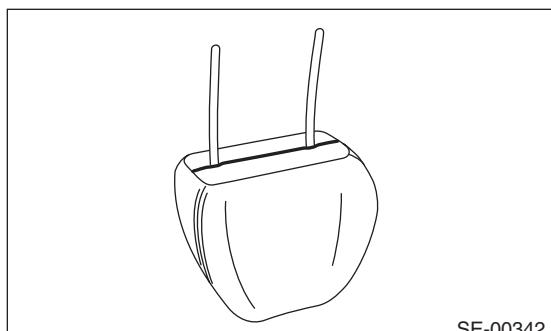

SE-00342

12) Remove the plastic fastener and hog rings, and then remove the armrest cover.

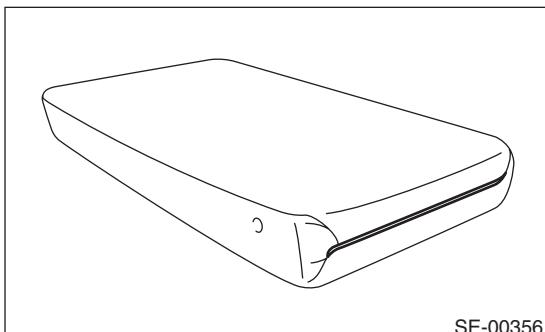

SE-00356

D: ASSEMBLY

CAUTION:

- Always use new hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that no wrinkle or twisting on backrest cover.

Assemble in the reverse order of disassembly.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.