


## 4. Seat Heater System

### A: REMOVAL

#### 1. SEAT HEATER MODULE

- 1) Remove the front seats. <Ref. to SE-6, REMOVAL, Front Seat.>
- 2) Remove the backrest cover of front seat and seat cushion cover. <Ref. to SE-7, DISASSEMBLY, Front Seat.>
- 3) Remove the seat heater module.

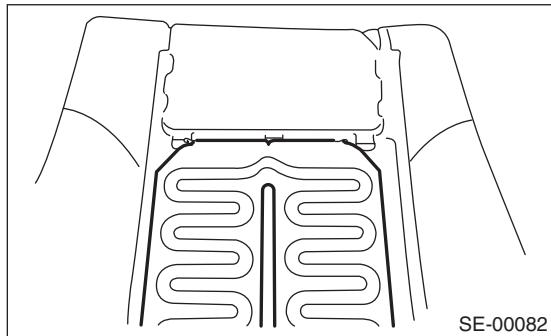

#### 2. SEAT HEATER SWITCH

- 1) Remove the console box. <Ref. to EI-48, REMOVAL, Console Box.>
- 2) Remove the seat heater switch from the console box.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

#### 1. WIRING DIAGRAM

<Ref. to WI-95, WIRING DIAGRAM, Seat Heater System.>

#### 2. SEAT HEATER MODULE


- 1) Disconnect the seat heater module connector, and check the continuity between terminals of connector.

##### *Connector & terminal*

**No. 1 — No. 3:**

**No. 1 — No. 4:**

**No. 3 — No. 4:**

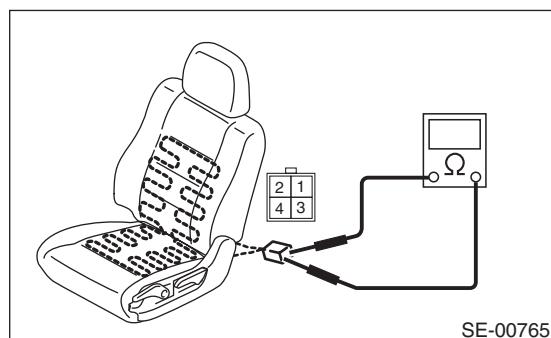

Is there continuity between connector terminals?

- **Continuity exists.**→

Seat heater module is normal. If there is a malfunction, check the seat heater switch and vehicle body side harness.


- **Continuity does not exist.**→

**No. 1 — No. 3:** → Go to step 2).

**No. 1 — No. 4:** → Go to step 2).

**No. 3 — No. 4:** → Replace the seat heater module of seat cushion side.

- 2) Disconnect the seat heater module of backrest side, and check the continuity between connector terminals of the seat heater module unit of backrest side.

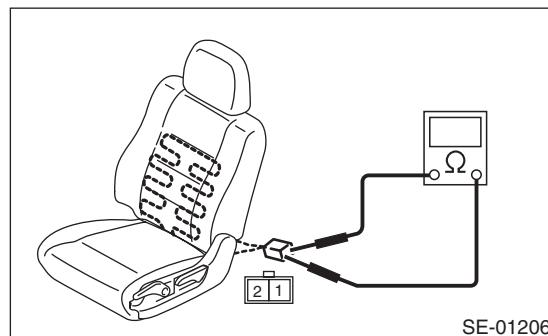

Is there continuity between connector terminals?


- **Continuity exists.**→

Replace the seat heater module of seat cushion side.

- **Continuity does not exist.**→

Replace the seat heater module of backrest side.

## 3. SEAT HEATER SWITCH

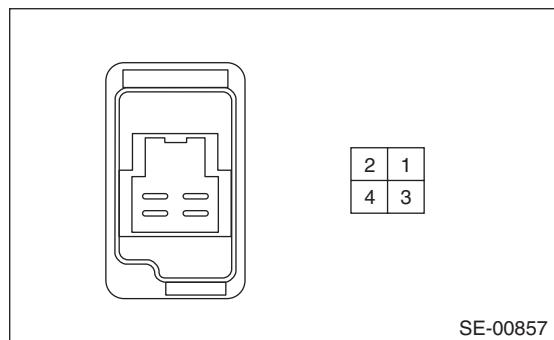

Inspect the continuity between the seat heater switch terminals.

### ***Connector & terminal***

#### ***HI***

- No. 2 — No. 1:***
- No. 2 — No. 3:***
- No. 1 — No. 3:***
- No. 4 — No. 3:***

#### ***LOW***

- No. 2 — No. 4:***
- No. 2 — No. 3:***
- No. 4 — No. 3:***

If no continuity exists, replace the seat heater switch with a new part.

# SECURITY AND LOCKS

**SL**

---

	Page
1. General Description .....	2
2. Door Lock Control System .....	8
3. Keyless Entry System .....	13
4. Security System .....	25
5. Front Inner Remote .....	31
6. Front Outer Handle .....	32
7. Front Door Latch and Door Lock Actuator Assembly .....	33
8. Rear Inner Remote .....	34
9. Rear Outer Handle .....	35
10. Rear Door Latch and Door Lock Actuator Assembly .....	36
11. Rear Gate Opener Button .....	37
12. Rear Gate Latch and Actuator Assembly .....	38
13. Trunk Lid Latch and Actuator Assembly .....	39
14. Front Hood Lock Assembly .....	40
15. Remote Openers .....	41
16. Ignition Key Lock .....	43
17. Key Lock Cylinders .....	44
18. Security Control Module .....	45
19. Impact Sensor .....	46
20. Keyless Entry Control Module .....	47
21. Keyless Buzzer .....	48
22. Body Integrated Unit .....	49
23. Transmitter .....	50
24. Immobilizer Control Module .....	52
25. Immobilizer Antenna .....	53