


## 10. Rear Door Latch and Door Lock Actuator Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-43, REMOVAL, Door Trim.>
- 3) Remove the wire from the rear inner remote. <Ref. to SL-34, REMOVAL, Rear Inner Remote.>
- 4) Remove the sealing cover. <Ref. to EB-24, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-18, REMOVAL, Rear Door Glass.>
- 6) Disconnect the harness connector.
- 7) Remove the three screws, and remove the rear door latch and door lock actuator assembly.

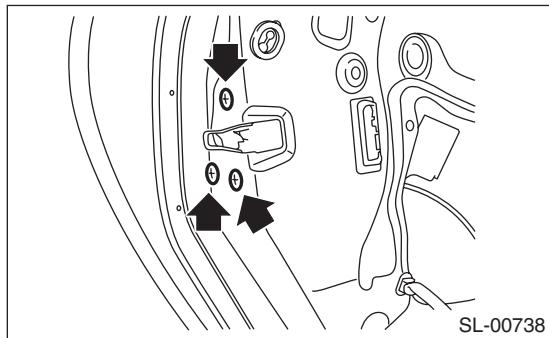

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

Refer to "COMPONENT" of "General Description". <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>


### C: INSPECTION

#### 1. DOOR LATCH

- 1) Check the cable for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check the lever and wire for smooth operation.

### 2. LOCK ACTUATOR

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

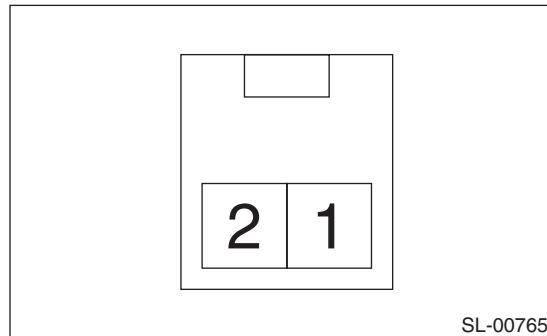

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	—	+
Unlock → Lock	+	—

If defective, replace the rear door latch and door lock actuator assembly.