


11. Rear Gate Opener Button

A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-67, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear gate garnish. <Ref. to EI-70, REMOVAL, Rear Gate Garnish.>
- 3) Disconnect the rear gate opener button harness connector.
- 4) Hold down the rear gate opener button hook, and remove the rear gate opener button.

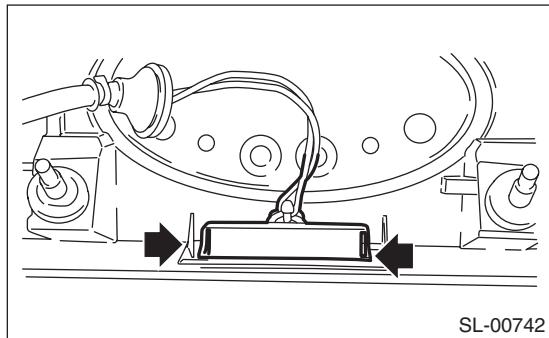

B: INSTALLATION

CAUTION:

Make sure that the harness grommet is securely installed.

If not properly installed, this may cause water immersion.

Install in the reverse order of removal.

C: INSPECTION

- 1) Disconnect the rear gate opener button harness connector.
- 2) Inspect the continuity between the rear gate opener button connector terminals.

Switch	Terminals	Standard
Open		Less than 1 Ω
Close	No. 1 and No. 2	1 MΩ or more

If defective, replace the rear gate opener button.