


## 13. Trunk Lid Latch and Actuator Assembly

### A: REMOVAL

- 1) Disconnect the connector to remove the trunk opener cable.
- 2) Remove the two bolts to remove the trunk lid latch and actuator assembly.

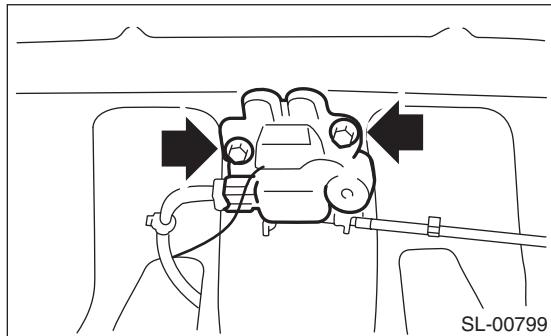

### B: INSTALLATION

#### CAUTION:

Route the safety lever wire so that it runs inside the trunk panel.

Install in the reverse order of removal.

#### Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SL-3, REAR GATE LOCK AND TRUNK LID, COMPONENT, General Description.>

#### NOTE:

Apply grease to the movable part.


### C: INSPECTION

#### 1. TRUNK LID LATCH

- 1) Check the latch for deformation or abnormal wear.
- 2) Check the safety lever for improper movement.
- 3) Check other levers and springs for rust formation or unsmooth movement.
- 4) Check the trunk opener cable for smooth operation.

### 2. LOCK ACTUATOR

- 1) Disconnect the harness connector of trunk lid latch and actuator assembly.
- 2) Connect the battery to the trunk lid latch and actuator assembly terminals.

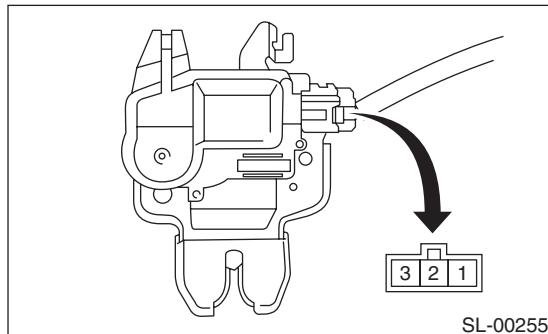

Actuator operation	Terminals	
	No. 1	No. 2
Lock → Unlock	—	+

Replace the trunk lid latch and actuator assembly if faulty.