


15. Remote Openers

A: REMOVAL

1. FRONT HOOD OPENER


- 1) Remove the cable from the front hood lock.
- 2) Remove the bolt, and then detach the opener lever.

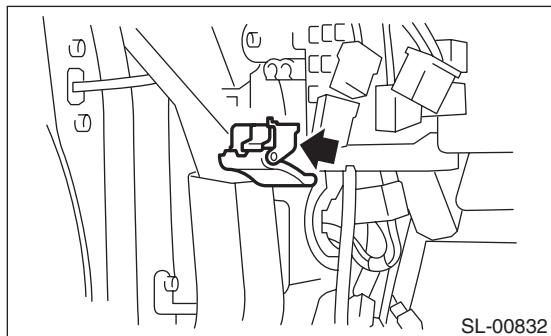

SL-00832

2. TRUNK LID OPENER

- 1) Remove the rear seat. <Ref. to SE-12, REMOV-AL, Rear Seat.>
- 2) Remove the lower inner trim, rear quarter trim and floor mat on the driver's side. Remove the clip holding the cable.
- 3) Remove the opener lever (1).
- 4) Remove the pin (2) and remove front cover (3).

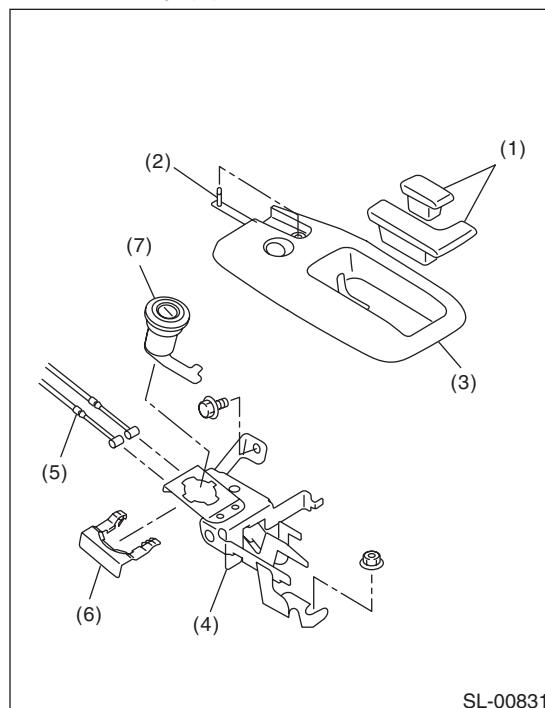

SL-00831

- (1) Opener lever
- (2) Pin
- (3) Front cover
- (4) Pull handle ASSY
- (5) Cable
- (6) Clamp
- (7) Key cylinder

- 6) Remove the cable (5) from the pull handle assembly (4).
- 7) Remove clamp (6) to remove the key cylinder (7).

CAUTION:


Remove the key cylinder in the UNLOCK position.

- 8) Remove the trunk lid lock assembly from the trunk lid.

Remote Openers


SECURITY AND LOCKS

9) Remove the cable from the trunk lid lock assembly.

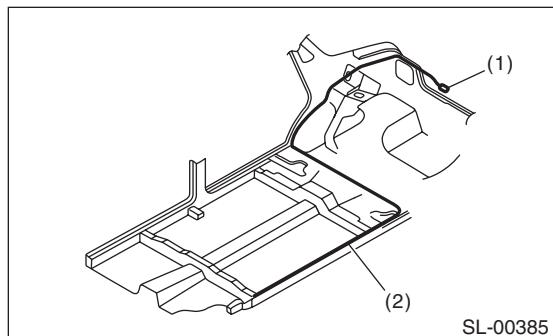

(1) Trunk lid lock ASSY
(2) Cable

6) Rotate the fuel lock inside the quarter panel to 90° and remove. (Either right or left turn)

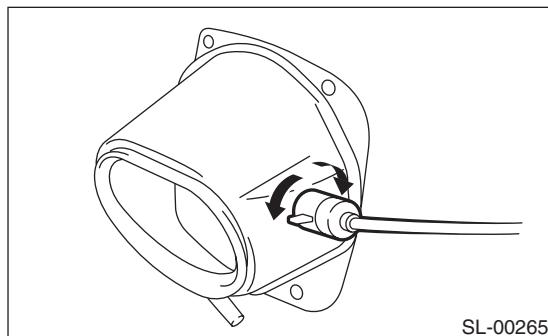

SL-00265


3. FUEL FILLER LID OPENER

4 DOOR MODEL

Refer to the trunk lid opener. <Ref. to SL-41, TRUNK LID OPENER, REMOVAL, Remote Openers.>

5 DOOR MODEL

- 1) Remove the rear seat. <Ref. to SE-12, REMOVAL, Rear Seat.>
- 2) Remove the lower inner trim, rear quarter trim and floor mat on the driver's side. Remove the clip holding the cable.
- 3) Remove the opener lever and detach the cover (1).
- 4) Remove the bolt and nut, and remove the pull handle assembly (2).

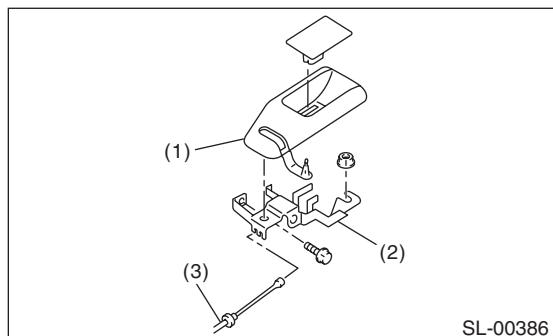

(1) Cover
(2) Pull handle ASSY
(3) Cable

- 5) Remove the cable (3) from the pull handle assembly (2).

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Make sure the front hood, trunk lid and fuel flap open and close smoothly.