


20. Keyless Entry Control Module

A: REMOVAL


1. 5 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the left rear quarter trim. <Ref. to EI-58, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the harness connector.
- 4) Remove the bolt and then remove the keyless entry control module.

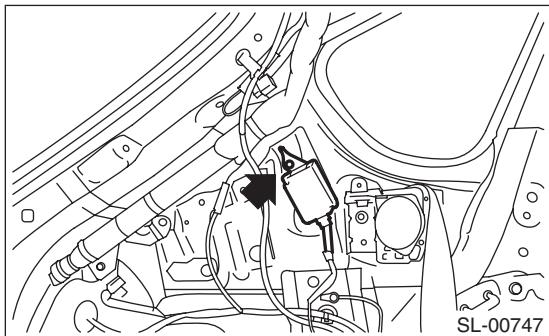

2. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear shelf trim. <Ref. to EI-60, REMOVAL, Rear Shelf Trim.>
- 3) Disconnect the harness connector.
- 4) Remove the bolt and then remove the keyless entry control module.

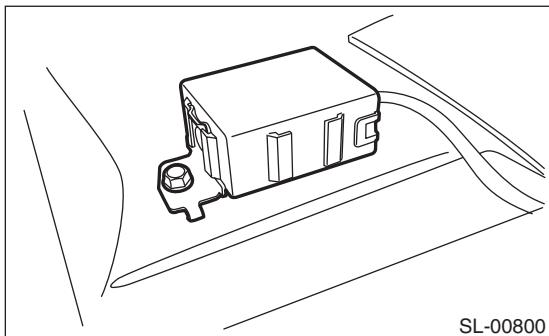

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

13 N·m (1.33 kgf·m, 9.6 ft-lb)