

24. Immobilizer Control Module

A: NOTE

The control of immobilizer system is carried out in body integrated unit. Refer to the section on the body integrated unit for the work procedures.

- Removal <Ref. to SL-49, REMOVAL, Body Integrated Unit.>
- Installation <Ref. to SL-49, INSTALLATION, Body Integrated Unit.>